

Original manual (EN)

ARX 36

ARX 40


ARX 40 K

ARX 45

ARX 45 K

Yanmar

Serial No. 40000-

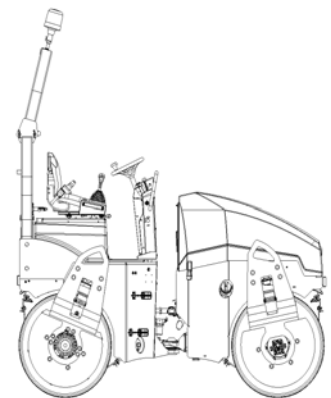



Declaration of Conformity

This is to certify that the machine | group of machines indicated below conform(s) to the relevant basic safety and health requirements of the relevant EC directives in terms of their conception and design and in the form marketed by us.

This declaration shall cease to be valid in the event of any change made to the machine/group of machines after handover to the trader/user if such changes are not agreed with us.

Name of machine or group of machines:	Tandem roller & combined roller
Model Type:	ARX 36, ARX 40, ARX 40 K, ARX 45, ARX 45 K
Mode of functioning:	Ground compaction
Serial number:	40,000 - 45,000
Relevant EC directives:	- Machinery Directive 2006/42/EC - Directive on Electromagnetic Compatibility 2004/108/EC - Emission Directive 97/68/EC - Noise Directive 2000/14/EC
Applicable harmonized standards:	EN 500-1, EN 500-4,
Issuing testing office for noise tests:	TÜV Austria Testing office number: 0408
Machine type as per appendix I from 2000/14/EC:	No.: 8
Conformity assessment as per appendix VIII from 2000/14/EC:	Unit verification ISO 9001 certificate no.: 30605
Noise emissions:	Recorded sound power level: 102dB(A) Guaranteed sound power level: 106dB(A)
Manufacturer:	Ammann Schweiz AG
Address:	Eisenbahnstrasse 25 CH-4901 Langenthal


Signatures:

Name:

Mode of functioning:


Authorized representative:

Place, Date:

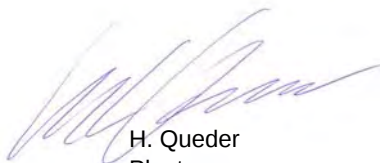 H. Queder Plant manager	 Ch. Anliker Technology Manager
---	---

The technical documents are stored in the care of the above-mentioned persons

Langenthal, March 2012



Preface

Congratulations on your purchase of an Ammann compaction roller.

This quality of this compaction device is characterized by simple operation and maintenance and is the product of many years of Ammann experience in the field of road roller engineering.

Because the content of the deliverable depends on the order, the features of your roller may differ in some descriptions and pictures.


In order to avoid faults due to improper operation and maintenance we request that you read this operating manual with great care and keep it for later reference.

With kind regards

Ammann Schweiz AG
Eisenbahnstrasse 25
CH-4901 Langenthal

Phone: 0041 (0)62 916 61 61
Fax: 0041 (0)62 916 64 03

www.ammann-group.com



Contents

1	General	13
1.1	About this manual	14
1.1.1	Target audience	14
1.1.2	Purpose	14
1.1.3	Overview of customer documentation	14
1.1.4	Validity of the manual	15
1.1.5	Storage of the manual	15
1.1.6	Technical changes	15
1.1.7	Copyrights	15
1.1.8	Spare parts	15
1.2	Structure of the manual	16
1.2.1	Orientation on the roller	16
1.2.2	Warnings	16
2	Product description	19
2.1	Identification of the roller	20
2.1.1	Machine types	20
2.2	Product data	21
2.2.1	Dimensions	21
2.2.2	Specifications	22
2.3	Roller designation	22
2.3.1	Identification plate	22
2.4	Intended use	23
2.4.1	Intended purpose of the ARX 4	23
2.4.2	Requirements for the roller driver	24
2.4.3	Application limits	24
2.5	Inappropriate use	24

2.5.1	Disclaimer	24
3	Safety information	27
3.1	General work safety	28
3.2	Roller operation	28
3.2.1	Shear points	29
3.3	Rollover bar (ROPS)	30
3.4	Noise levels	31
3.5	Safety labels on the machine	31
3.5.1	Warning stickers	32
3.5.2	Notice stickers	34
3.6	Vibration hazard	35
3.6.1	Whole-body vibrations	35
4	Structure and function.	37
4.1	Component overview	38
5	Operating and display elements.	41
5.1	Instrument panel	42
5.1.1	Switch functions	42
5.1.2	Control lamps	43
5.1.3	Control lamp functions	44
5.2	Error code	47
5.2.1	Display upon start-up	47
5.2.2	Displays during operation	47
6	Commissioning	51
6.1	Commissioning	52
6.1.1	Roller with pneumatic wheel (combined roller)	52
6.1.2	Wide tires	52
7	Operation	55
7.1	Rollover bar (ROPS)	56
7.1.1	Folding the ROPS upward	56
7.2	Driver's seat	57
7.2.1	Safety information	57
7.2.2	Adjusting the driver's seat	58
7.3	Protection against vandalism	59
7.4	Starting the engine	60
7.4.1	Ignition switch	60
7.4.2	Starting the engine	60
7.5	Driving and braking	61
7.5.1	Setting the speed	61
7.5.2	Driving	61
7.6	Work gear / transport gear	62
7.7	Turning off the engine	62
7.8	Parking brake	63
7.9	Seat switch	63
7.9.1	Opening the seat switch	63
7.9.2	Closing the seat switch	63
7.10	Emergency stop	64
7.10.1	Initiating an emergency stop	64
7.10.2	Releasing the emergency stop	64
7.11	Locking brake	64
7.12	Sprinkling	65
7.12.1	Checking water level	65
7.12.2	Refilling with water	65
7.12.3	Switching on continuous sprinkling	66

7.12.4	Switch on interval sprinkling	66
7.13	Simple/double vibration	66
7.13.1	Preselecting the frequency	67
7.13.2	Vibration on / off.	67
7.14	Vibration automation	67
7.14.1	Manual vibration	68
7.14.2	Automatic vibration	68
8	Options	69
8.1	Edge cutter	70
8.1.1	Presetting edge cutter	70
8.1.2	Operation of the edge cutter	71
8.1.3	Disks	71
8.2	2 operating levers	72
8.3	Rear work light and revolving warning light	73
8.4	Revolving warning light	73
8.4.1	Switching on the revolving warning light	73
8.4.2	Positions of the revolving warning light	73
8.4.3	Replacing the bulb	74
8.5	Roof	74
8.5.1	Transport with ROPS folded down	75
8.5.2	Fitting / removing the roof	75
8.5.3	Transport with ROPS folded up.	75
8.5.4	Removing the tarpaulin	75
8.6	Reversing alarm.	76
8.7	Battery cut-off switch	76
8.7.1	Battery cut-off switch on / off	76
8.8	Traction aid (flow divider).	77
8.9	Anti-adhesive	78
8.9.1	Switching on anti-adhesive	78
8.9.2	Advantages of anti-adhesive	78
8.9.3	Anti-adhesive designations	79
9	Maintenance	81
9.1	General safety instructions	82
9.1.1	Battery safety instructions	84
9.2	General information about maintenance	84
9.3	Maintenance ARX 4.	85
9.3.1	Maintenance plan	85
9.4	Maintenance check sheet	88
9.5	Towing	89
9.5.1	Releasing brakes.	89
9.6	Opening the hood	91
9.7	Engine compartment overview.	92
9.8	Fuel (diesel)	93
9.8.1	Checking fuel level.	93
9.8.2	Refueling	93
9.8.3	Draining fuel.	94
9.8.4	Cleaning the fuel tank	94
9.8.5	Fuel filter element	95
9.8.6	Water separator filter element	95
9.9	Engine oil.	96
9.9.1	Checking the engine oil level.	96
9.9.2	Topping up the engine oil	96
9.9.3	Draining engine oil.	97
9.9.4	Replacing engine oil filter.	98
9.10	Hydraulic oil	98
9.10.1	Checking the hydraulic oil level	98

9.10.2	Topping up hydraulic oil	98
9.10.3	Draining the hydraulic oil	99
9.10.4	Cleaning the hydraulic oil cooler	100
9.10.5	Replacing the hydraulic oil filter	100
9.10.6	Replacing the ventilation filter	101
9.11	Emptying the water tank	102
9.11.1	Cleaning accessories	102
9.11.2	Emptying the water tank	102
9.12	Coolant	102
9.12.1	Checking coolant level	102
9.12.2	Topping up coolant	103
9.12.3	Cleaning the radiator	103
9.13	Functional check	104
9.13.1	Sprinkler system	104
9.13.2	Roller drum scraper	104
9.13.3	Tire pressure	105
9.13.4	Air-intake filter	105
9.13.5	Seat contact and emergency stop	107
9.13.6	Brakes (brake test)	107
9.13.7	Pendulum support / articulated joint	108
9.14	Lubricating steering cylinder, bearing	109
9.15	Lubricant table	110
9.16	Consumables	111
9.17	Tightening torques	111
9.18	Cleaning the roller	112
10	Repair	115
10.1	Battery	116
10.1.1	Replacing the battery	116
10.1.2	Starting with another battery (jumping)	117
10.1.3	Charging the battery using a battery charger	118
10.1.4	Long-term storage	118
10.2	Fuses	118
10.2.1	Engine compartment fuses	119
10.2.2	Steering column fuses	119
10.3	Replacing bulbs	120
10.3.1	Replacing bulbs at the front	120
10.3.2	Replacing bulbs at the rear	122
10.4	Gas strut	122
10.4.1	Replacing gas struts	123
11	Storage	125
11.1	Storage	126
11.1.1	Short-term storage	126
11.1.2	Long-term storage	126
11.2	Winterization (risk of freezing)	126
11.2.1	Draining the water tank and sprinkler	127
11.2.2	Removing the water filter	127
12	Transport	129
12.1	Transport	130
12.1.1	Joint protection	130
12.1.2	Lifting at the 4-point lifting eyes	131
12.1.3	Securing the roller on the transporter	131
12.1.4	Center of gravity	132
13	Disposal	135
13.1	Introduction	136

13.2	Removal and depressurization of the gas struts	136
14	Appendix	139
14.1	Wiring diagram, ARX 4	140
14.1.1	Key for ARX 4 wiring diagram	142
14.2	Hydraulics diagram, ARX 4	146
14.2.1	Key for ARX 4 hydraulics diagram.	147
14.3	Hydraulics diagram, ARX 4 K	148
14.3.1	Key for ARX 4 K hydraulics diagram	149



General

1.1 About this manual

This manual is part of the customer documentation for the ARX 4 vibration roller. It is customer documentation of the Ammann Schweiz AG and its representatives in other countries.

1.1.1 Target audience

The target audience for this manual is the owner/operator of the ARX 2 vibration roller along with his employees who have been authorized for repair, operation and maintenance by the owner/operator.

1.1.2 Purpose

The purpose of this manual is to ensure the optimal use and safe application of the roller for the following processes.

- Commissioning
- Operation
- Maintenance
- Repair

1.1.3 Overview of customer documentation



Please check that the delivery is complete and inform us within 14 days after purchase if the delivery is not complete. Please always indicate the serial number.

The customer documentation for the vibration roller and its components includes, among others, the following customer documents.

- Roller manual
- Spare parts catalog for roller
- Yanmar engine manual in English
- Yanmar engine manufacturer's declaration

Tab. 1-1 Documents for the ARX 4

Language	Manual	Spare parts catalog
Danish	1208538	
German	1208206	1214202
English	1208531	1214202
Finnish	1208543	
French	1208530	1214202
Italian	1208533	
Dutch	1208534	
Norwegian	1208537	
Polish	1208539	

Language	Manual	Spare parts catalog
Portuguese	1208542	
Russian	1208541	
Slovenian	1208535	
Spanish	1208532	
Czech	1208536	

1.1.4 **Validity of the manual**

This manual is valid for the following rollers:
ARX 36, ARX 40, ARX 45, ARX 40 K, ARX 45 K

An assortment of optional equipment is available for the roller, which we can install as you wish. For this reason, some of the figures or descriptions in this manual could deviate from your roller.

1.1.5 **Storage of the manual**

Ammann Schweiz AG delivers every vibration roller with this manual. The manual is a permanent component of the roller. Store it so that it is always available for viewing by the users.

Ensure that the manual is complete and legible. If the manual should become lost, damaged or illegible, replace it promptly.

The obligation to properly store the manual for the roller covers the roller's entire service life. If you loan the roller, ensure that the manual is taken along on board the roller. If the roller is sold, hand the manual over to the new owner.

1.1.6 **Technical changes**

In the interest of technical developments, Ammann Schweiz AG reserves the right to make changes to this customer document at any time without separate notice.

1.1.7 **Copyrights**



The publisher of this EC compliant customer document is Ammann Schweiz AG.

We reserve all rights for this document and the roller described therein. Reproduction, disclosure to third parties or utilization of its content is forbidden without our express permission. © 2011 Ammann Schweiz AG

1.1.8 **Spare parts**

In this manual, we describe selected maintenance work. We refer you to your authorized dealer for the remaining maintenance work in accordance with the maintenance plan.

When performing scheduled and unscheduled repairs, you may need to replace components of the roller.

Only use spare parts which meet the requirements specified by the Amman Schweiz AG. These requirement are fulfilled if only original Ammann spare parts are used.

For the ordering of spare parts, we provide you with a spare parts catalog.

1.2 Structure of the manual

The following explanations are designed to familiarize you with the roller and to provide support for handling and maintenance.

It is essential that you read chapter 3 *Safety information*, Page 27 carefully before commissioning and carrying out maintenance work.

Observing the "safety instructions" in particular increases the reliability of the roller in operation and its service life. This reduces repair costs and down time.

1.2.1 Orientation on the roller

When describing the components of the roller, we inform you of their position on the roller. We adhere to the orientation below when doing so.


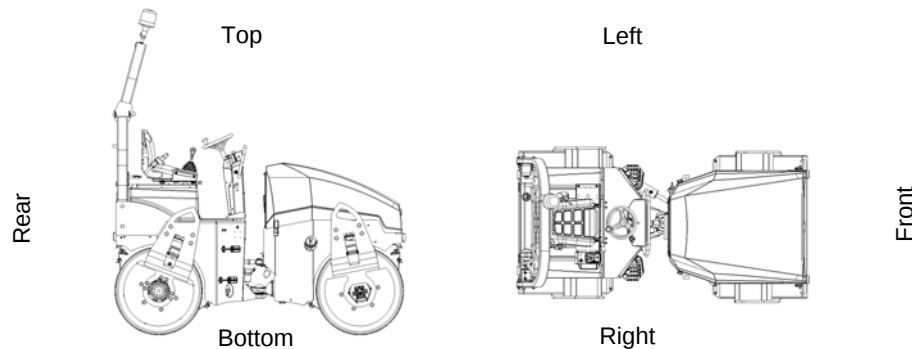


Fig. 1-1 Orientation ARX 4


We view the roller from the position of the driver in the driver's position in the direction of travel.

1.2.2 Warnings


Please observe the meaning of the following warnings:

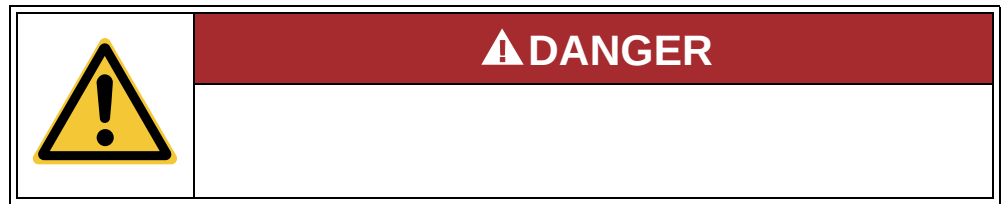

- **DANGER** represents an **immediate hazard** leading to **severe bodily injury** or **death**.

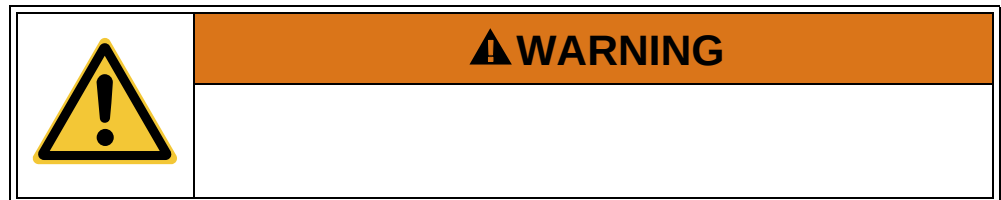

- **WARNING** represents a **possibly hazardous situation** which could lead to **severe bodily injury** or to **death**.

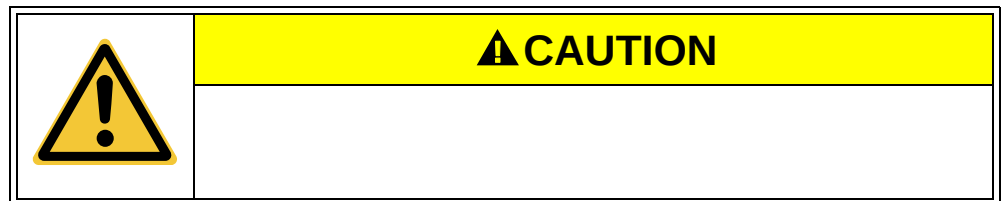

- **CAUTION** represents a **possibly hazardous situation** which could lead to **slight bodily injury**.
- Caution also represents a hazard of **environmental pollution** causing local or global environmental damage.

NOTE

The battery poles and terminals must be clean. If they are coated with a (whitish or greenish) sulfur crust they must be cleaned.

NOTE

Risk of cable fire or short circuit

- **NOTE** represents first of all: damage which could be caused to the roller or parts of it.
- **NOTE** represents secondly: application tips and other particularly useful information.
- **NOTE** is **not** a signal word for a hazardous or damaging situation.



2

Product description

2.1 Identification of the roller

2.1.1 Machine types

The data given below serve to identify the models. The machine models differ only in terms of weight and the width of the roller drum. The combined roller has a pneumatic wheel axis instead of the smooth back drum roller.

ARX 36
ARX 40
ARX 45



Tab. 2-1 Roller with roller drum

Model	Roller drum width	Weight
ARX 36	1300 mm	3740kg
ARX 40	1300 mm	4125kg
ARX 45	1380 mm	4670kg

ARX 40 K
ARX 45 K




Tab. 2-2 Roller with pneumatic wheel (combined roller)

Model	Roller drum width	Weight
ARX 40 K	1300 mm	3840kg
ARX 45 K	1380mm	4070kg

2.2 Product data

2.2.1 Dimensions

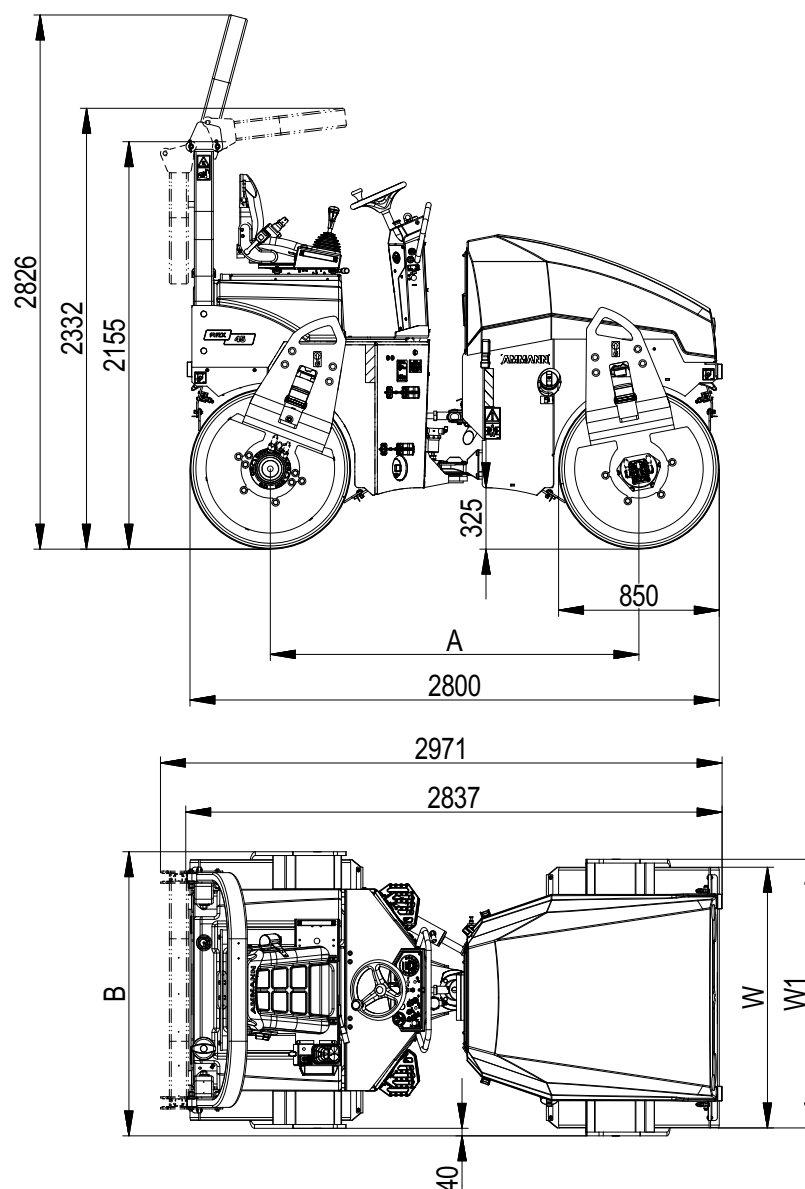

Tab. 2-3 ARX 4 dimensions

	ARX 36	ARX 40	ARX 45	ARX 40 K	ARX 45 K
A	1950	1950	1950	2008	2008
B	1423	1423	1503	1463	1463
W	1300	1300	1380	1300	1380
W1	1341	1341	1421	1341	1421

2.2.2 Specifications

Tab. 2-4 ARX 4 Performance Characteristics

	ARX 36	ARX 40	ARX 45	ARX 40 K	ARX 45 K
Service weight according to CECE (kg)	3740	4125	4670	3840	4070
Max. service weight (kg)	4300	4700	5100	4700	5100
Static linear load (kg/cm)	14.4	15.8	16.9	15.8	16.9
Wheel load (kg)	-	-	-	480	508
Inside turning radius (mm)	2581	2581	2621	2581	2621
Amplitude (mm)	0.57/0.36	0.57/0.36	0.55/0.34	0.57/0.36	0.55/0.34
Max. compaction force per roller drum (kN)	50	52	55	52	55
Gradient in % with/without vibration	30/40	30/40	30/40	30/40	30/40
Drive	YANMAR 3TNV88/Euromot 3A - EPA Inter 4				
Performance according to ISO 3046	30.0kW / 40.8HP				
Operating speed	1.) 2100 1/min 2.) 2400 1/min				
Travel speed	0-10km/h				
Steering angle/pivoting	+/-32°/+/-8°				
Vibration frequency 2100/2400 1/min	1.) 45Hz 2.) 57Hz				

Fill levels

Tab. 2-5 Fill levels ARX 4

Container	Contents
Water tank capacity	350l
Hydraulic oil tank	37l
Diesel tank	59l
Anti-adhesive tank	18l

2.3 Roller designation

2.3.1 Identification plate

An identification plate is affixed to the roller for identification. The identification plate is attached to the rear part of the chassis below the steering column.

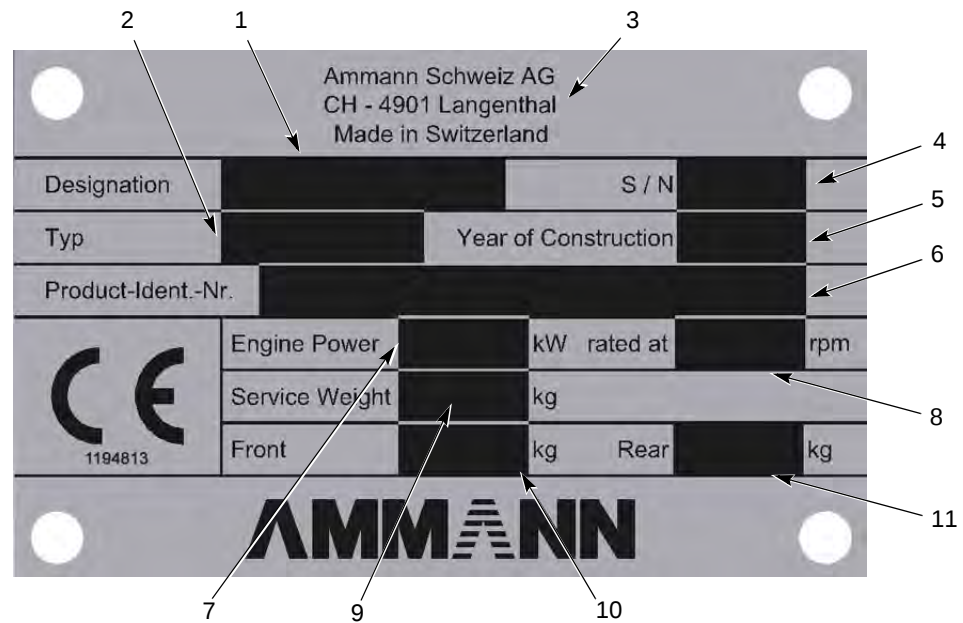


Fig. 2-1 Data on the identification plate

- 1 Roller designation
- 2 Roller model
- 3 Name and address of the manufacturer
- 4 Serial number
- 5 Year of manufacture
- 6 Vehicle Identification Number (VIN)
- 7 Fuel engine output at
- 8 Speed of fuel motor (rpm)
- 9 CECE total weight (max. weight in Switzerland)
- 10 CECE front axle weight (max. axle weight in Switzerland)
- 11 CECE rear axle weight (max. axle weight in Switzerland)

NOTE When ordering spare parts you must indicate the serial number (S/N) of the roller.

2.4 Intended use

2.4.1 Intended purpose of the ARX 4

ARX 4 vibration rollers are universal rollers designed for use on small and medium-sized building sites.

Normal modes of operation Use the ARX 4 roller exclusively for driving on and compacting:

- Unbonded layers (earth, gravel, crushed stone).
- Blacktops (asphalt).

Special operating modes

- Transport of the roller from A to B (crane and low loader).
- Cleaning the roller.
- Maintenance of roller according to maintenance plan or in the event of defects.
- Rectification of machine faults by trained personnel based on error messages.
- Towing the roller.
- Proper disposal by the operator in accordance with national regulations.

2.4.2 Requirements for the roller driver

Only trained, suitable and reliable specialists with a valid national driving license for this category of vehicle may operate the rollers.

2.4.3 Application limits

Tab. 2-6 Limits for application in consideration of environmental conditions

	Operation	Storage
Temperature limit	-10°C to +48°C	-25°C to +48°C
Humidity	All-year operation / outdoor storage	
Terrain	Level	Level
Slope up	30% with / 40% without vibration	40%
Slope down	30% with / 40% without vibration	40%

2.5 Inappropriate use

Inappropriate use includes any use not listed under intended use. Note the following in particular:

- The roller is not a playground.
- The roller must not be used for traction.
- The roller is not a passenger transporter.
- In the case of movements greater than 3km, the roller must be loaded on a transporter.
- The roller is not a rock crusher, breaking chisel or similar.

2.5.1 Disclaimer

Ammann Schweiz AG accepts no liability for maintenance of reliable functioning of the roller if it is not used appropriately.

Unauthorized conversions and changes to the roller are prohibited for safety reasons and void any and every Ammann guarantee as well as, possibly, the CE directive.

Replaced spare or wear parts must meet the technical requirements specified by Ammann. These requirements are fulfilled if only original Ammann spare parts are used.

The instructions given in the various sections must be adhered to. The safety instructions must be observed at all times. Failure to adhere to working instructions, their correct order, safety instructions or safety labeling requirements causes liability claims to become void.

3

Safety information

3.1 General work safety

- The roller may only be used for driving and compacting unbound layers (gravel, soil) and blacktops (asphalt). Other uses are prohibited.
- Rollers may only be operated with all safety devices. Manipulation or disregard of safety devices and regulations invalidates the CE conformity.
- Before starting every shift, check the effectiveness of the operation and safety devices and that the protection devices are in place.
- Check the steering and brakes when you start work. If defects are apparent roller operation is not permitted.
- If you identify any defects on the safety system or defects that impair safe operation of the equipment, inform your supervisor immediately. The roller may no longer be operated.
- If you identify any defects which endanger safe operation, cease operation immediately.
- Only perform work on and clean the roller if it is stationary and secured from rolling away.
- Switch off the engine when filling the fuel tank. Do not fill up fuel in closed rooms. No open flames.
- Do not vibrate on slopes or inclines where there is a hazard of slipping or overturning.
- Do not drive on slopes that are steeper than the maximum climbing capacity of the equipment. Always drive the roller carefully perpendicular to the slope dip.
- Do not vibrate inside buildings and on instable ground.
- Keep the driver's position and steps free of trips, grease, dirt, ice, etc.
- The driving and working field of view may not be obstructed in any way. Adjust all the necessary mirrors correctly and keep them clean.
- Switch off the engine before leaving the roller. Secure the roller from unauthorized start-up and rolling away.
- Take suitable measure to secure lowered rollers that pose an obstruction.
- Never work under the influence of drugs, alcohol or medicines that impair consciousness.
- Only operate the roller in good general light conditions and good workspace illumination.
- The operator's workplace is on the seat of the driver's platform. The roller may not be operated from any other position.

1208531 | 03.07.2012

3.2 Roller operation

	⚠ DANGER
	Rollover hazard when driving the roller! • Only start the roller from the driver's position. • No persons may stand in front of or behind the roller while it is in operation. • Persons necessary for operations at the sides of the equipment must remain at a safe distance of at least 1 m.

3.2.1

Shear points

- When closing the hood ensure that no objects are situated between the hood and the chassis.
- Take care that nothing is jammed in the joint plates when rotating the roller drums.
- Do not put hands between the roller drum and support during operation.

	⚠ DANGER
	Danger to life through tipping or slipping of the roller! The edges of filled areas may give way! • Only travel directly up or down slopes. • Do not drive across slopes. • Keep your distance to embankments and edges! • Do not drive over steps on roadways! • Park the roller on slopes only in such a way that it cannot tip over. • Use the roller on slopes only in such a way that it cannot tip over. • The roller drums have very poor adhesion on snow and ice. Driving or working on a slope in snow or ice is prohibited.

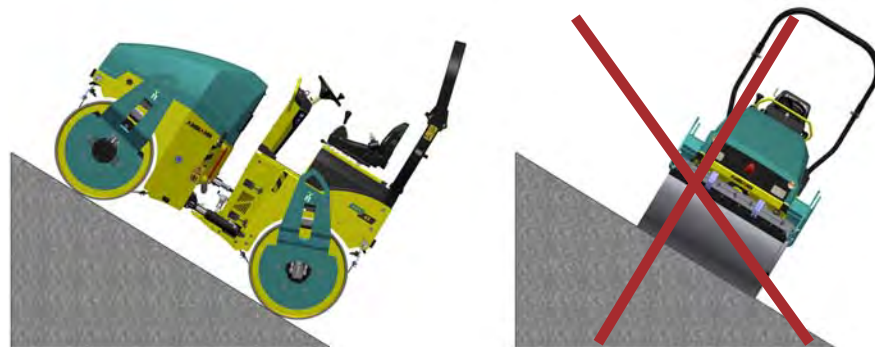


Fig. 3-1 Tipping hazard!

 	⚠ DANGER
	Danger to life through being thrown out! • Always wear the safety belt. Together with the rollover bar it is a safety system that can save your life. Keep the following hazards in mind: • Plane surfaces are not always uniformly load-bearing. • Cavities or large stones may be located below the surface. • Loamy/clayey soils become slippery when wet. • Vibration can increase the hazard of lateral slipping. • High steering angles at slope edges increase the hazard of overturning. • Articulated machines are in particular danger from high steering angles on slopes.

	⚠ DANGER
	Crushing of toes through careless handling of the roller! • Wear safety shoes when working with the roller in order to help avoid crushed toes.

	⚠ DANGER
	Danger of accident through improper operation of the roller! • Read the operating instructions before operating the roller. • Adhere to the safety regulations at all costs. • In case of lack of clarity, contact your authorized dealer.

3.3 Rollover bar (ROPS)

	⚠ DANGER
	Danger to life through overturning of the roller! • Never operate the roller with the ROPS folded down!



Fig. 3-2 Never fold the ROPS down during operation

	⚠ WARNING
	Danger of accident due to alterations to the ROPS! Safety is no longer ensured if unqualified modifications or alterations are made on the ROPS. • Do not make any modifications to the ROPS without the permission of the manufacturer.

NOTE

Check that:

- The roller chassis is not bent or cracked in the area of the ROPS mounting.
- The ROPS has no cracks or fractures.
- All screw connections are tight (note tightening torque).

3.4

Noise levels



 	⚠ WARNING
Hearing damage due to continuous noise level!	
Depending on the use of equipment it is possible that the allowed noise level of 85dB (A) will be exceeded.	
• Wear ear protectors in accordance with national accident prevention regulations when working at higher noise levels.	

The following noise level measurements were carried out by an accredited testing and monitoring body in accordance with machine directive 2000/14/EEC of the European parliament and council.

Inspecting and monitoring organization: TÜV Österreich (Austrian technical inspection) Testing body no. 0408

Tab. 3-1 ARX 4 sound power level

Model	Value
Measured sound power level	ARX 4 = 102 dB (A)
Guaranteed sound power level	ARX 4 = 106 dB (A)
Measured sound pressure level at the driver's position	ARX 4 = 87.7 dB (A)

NOTE

The obligation to wear ear protection is standardized nationally. In Switzerland and Germany, this is as of a measured level of 85dB (A) (sound pressure).

3.5

Safety labels on the machine


- Observe and adhere to the rules.
- Keep the safety stickers and signs complete and legible.
- Replace any damaged or illegible stickers and signs immediately.
- You can order new stickers from Ammann Schweiz AG.

From the moment the signs are no longer recognizable and understandable at first glance, the machine must be shut down until new signs are installed.


3.5.1

Warning stickers

Tab. 3-2 Warning stickers on board

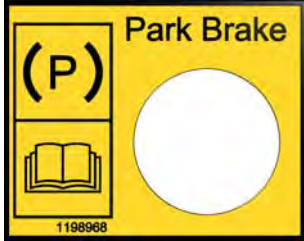Warning stickers	Meaning
	Relationship to roller: Operating lever console. Danger: Rollover hazard! Explanation: Always set the parking brake when leaving the vehicle.
	Relationship to roller: Driver's position. Danger: Danger of injury due to incompetent operation: Explanation: Read the operating instructions before operating the roller. Adhere to the safety regulations at all costs. Contact your authorized dealer if anything is unclear.
	Relationship to roller: Between the front and rear parts of the roller. Danger: Crushing hazard! Explanation: Only stand in this area when necessary and only with extreme caution!
	Relationship to roller: Radiator, both sides. Danger: Hand injury! Explanation: Do not put hands in the radiator fan when the machine is running.



Warning stickers	Meaning
	Relationship to roller: Rollover bar (ROPS). Danger: Crushing hazard! Explanation: Never operate the roller with the ROPS folded down.
	Relationship to roller: Brake. Danger: Wear of the locking brake. Explanation: Only operate the parking brake when at a standstill. Only operate the emergency stop when at a standstill or in an emergency. After several operations of the locking brake while the roller is in motion, the brake test must be performed.
	Relationship to roller: Driver's position. Danger: Damage to electrical controls! Explanation: Never spray the water jet into electrical or electronic components. Never spray into the engine combustion air intake.
	Relationship to roller: Driver's position and immediate vicinity of the roller. Requirement: Wear ear protectors! Explanation: Wear ear protectors in accordance with national accident prevention regulations when working at higher noise levels.

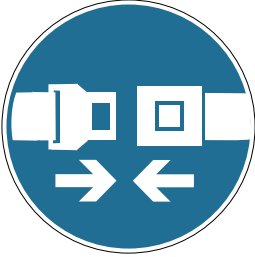Warning stickers	Meaning
	Relationship to roller: Driver's position. Requirement: Wear a safety belt! Explanation: Always wear the safety belt when in the driver's seat.

3.5.2

Notice stickers

Tab. 3-3 Notice stickers on board

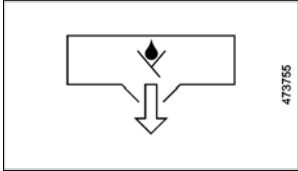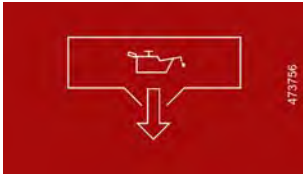Notice stickers	Meaning
	Relationship to roller: On rear chassis, front right. Designation: Guaranteed sound power level. Explanation: Indicates the overall noise level produced by the roller.
	Relationship to roller: Front chassis, left. Designation: Hydraulic oil drain. Explanation: Drain hole for the hydraulic oil
	Relationship to roller: Front chassis under the cooler. Designation: Motor oil drain. Explanation: Drain hole for the motor oil
	Relationship to roller: Front chassis, right side, over the filler neck. Designation: Fuel. Explanation: Filler neck for diesel fuel.

Notice stickers	Meaning
 410888	Relationship to roller: On the four wheel supports. Designation: Suspension hooks. Explanation: Points on the roller at which hoisting tackle for lifting the roller can be attached.
 1155236	Relationship to roller: On the front and rear chassis, on the left and right, respectively. Designation: Tie-down point. Explanation: Points on the roller at which lashing means for securing the roller on the transport vehicle can be attached.

3.6 Vibration hazard

3.6.1 Whole-body vibrations

The acceleration data given below for the three directions were measured in accordance with Directive 2002/44/EC of the European Parliament and Council. According to this directive the following shall be taken into consideration for risk assessment:

- Extent, type and duration of exposition as well as limit values.
- All impacts on the health and safety of the roller driver.
- Information provided by the roller manufacturer.

The following represent typical ground compaction activities with and without vibration. The impact duration shall be taken into consideration when calculating the daily exposition.

NOTE

The acceleration data are dependent on the methods used and the ground properties; that is, the values may deviate from those given.

4

Structure and function

4.1 Component overview

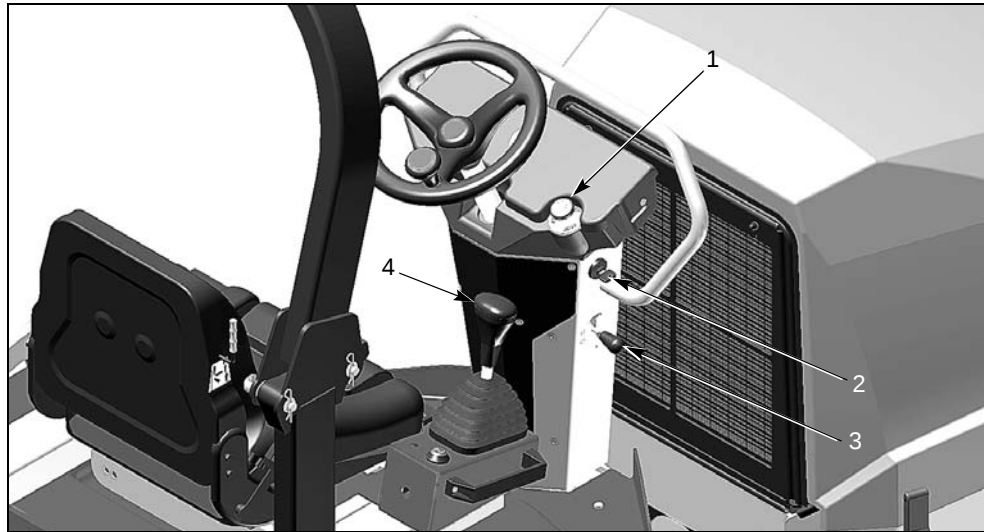


Fig. 4-1 View driver's position

- 1 Emergency stop switch
- 2 Ignition switch
- 3 Speed adjusting lever
- 4 Operating lever

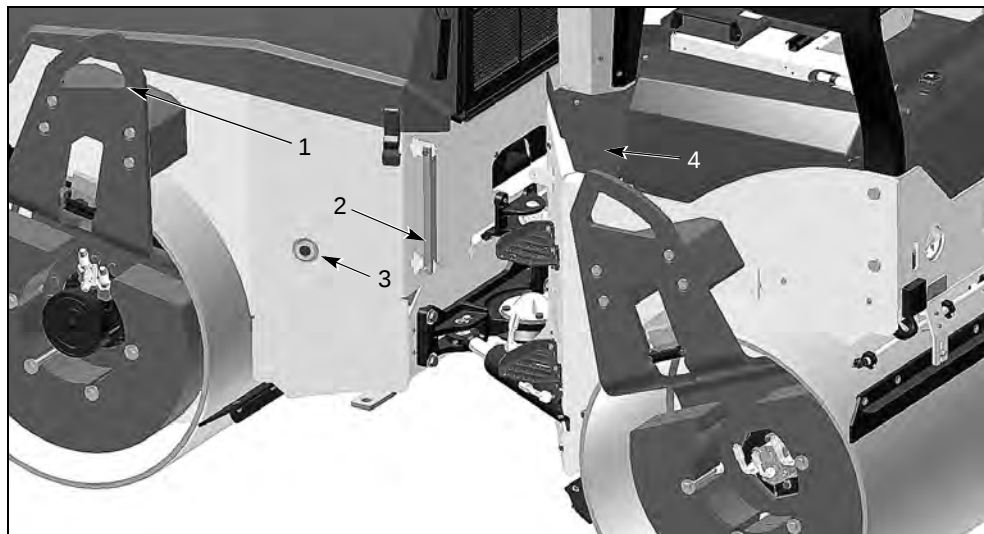


Fig. 4-2 View from left

- 1 Suspension
- 2 Articulated joint protection
- 3 Hydraulic tank oil level indicator (optical)
- 4 Filler neck cover for anti-adhesive tank (option)

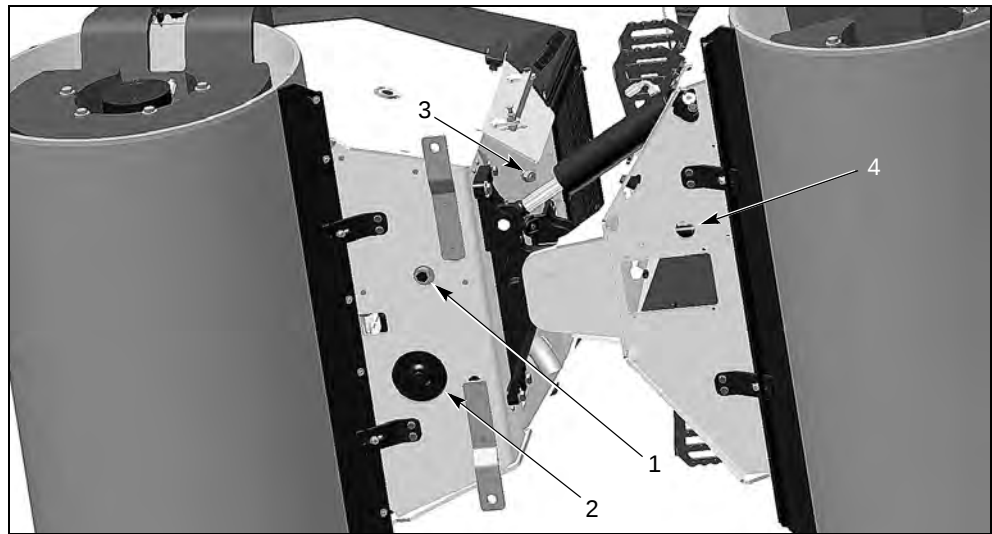


Fig. 4-3 View from below

- 1 Hydraulic oil drain
- 2 Diesel tank drain
- 3 Draining engine oil
- 4 Anti-adhesive tank drain

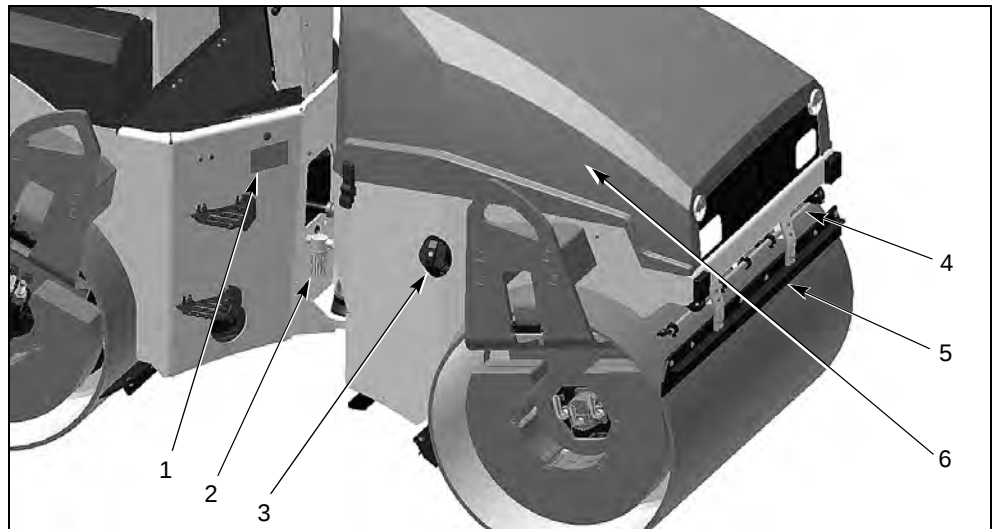


Fig. 4-4 View front right

- 1 Identification plate
- 2 Water filter
- 3 Tank cap (diesel)
- 4 Front sprinkler
- 5 Roller drum scraper
- 6 Document holder under the hood

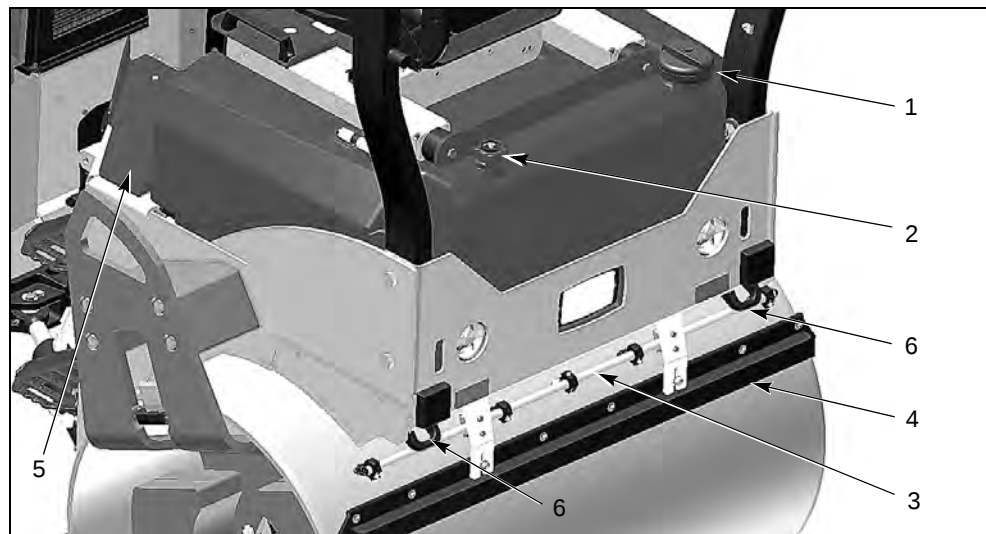


Fig. 4-5 View rear left

- 1 Water tank cover
- 2 Water level display
- 3 Rear sprinkler
- 4 Roller drum scraper
- 5 Water pump (below the footplate)
- 6 Towing lugs

5

Operating and display elements

5.1 Instrument panel

5.1.1 Switch functions



- 1 Operating switch for revolving warning light (option) and work light (option)
- 2 Horn
- 3 Operating switch for light
- 4 Operating switch for work gear / transport gear
- 5 Sprinkling interval switch
- 6 Indicator switch left / right (optional)
- 7 Vibration amplitude and frequency preselect
- 8 Operating switch for hazard flasher (optional)
- 9 Selector switch - vibration front or front and rear
- 10 Operating switch for vibration automation
- 11 Emergency stop

5.1.2

Control lamps



- 1 Control lamp error
- 2 Control lamp for battery charge level (charge control)
- 3 Engine oil pressure control lamp
- 4 Control lamp for engine coolant temperature
- 5 Control lamp for hydraulic oil temperature
- 6 Control lamp for emergency stop
- 7 Control lamp for diesel reserve
- 8 Control lamp for pre-heating
- 9 Brake pressure control lamp
- 10 Control lamp for parking light
- 11 Control lamp, dipped lights
- 12 Indicator control lamp
- 13 Fuel tank display
- 14 Operating hours counter
- 15 Battery voltage
- 16 Fault codes

The warning lamps for engine oil pressure, charge indicator and brake release/supply pressure must light up when the ignition is switched on. They must go off as soon as the engine is started.

5.1.3

Control lamp functions

Error



The **Error control lamp** lights as soon as the controller recognizes an error. At the same time, an error code will be shown on the display.

- 1 Check the machine based on the error code table.

If, after carrying out these checks, the battery charging lamp is still lit, call a specialist.

Battery



If the **battery charge level control lamp** lights up during operation or does not go off after starting, carry out the following check immediately.

- 1 Stop the engine.
- 2 Check the engine for defective or loose V-belt.

If, after carrying out these checks, the battery charging lamp is still lit, call a specialist.

Engine oil pressure



If the **engine oil pressure control lamp** lights up during operation or does not go off after starting, stop the roller and turn off the engine immediately!

- 1 Check the engine for oil loss and correct oil level.
- 2* The oil level in the engine is correct: Call a specialist to remedy the problem.

Coolant temperature



	⚠ WARNING
	Danger of scalding! The cooling circuit is pressurized.

NOTE

Danger of engine overheating. Stop immediately!

If the **coolant temperature control lamp** lights up during operation of the machine, switch off the engine **immediately** and top up coolant!

- 1 Allow the engine to cool down.
- 2 Remove the radiator cap.
- 3 In order to avoid scalding, first unscrew the radiator cap one turn and allow the pressure to drop.
- 4 As soon as the pressure has dropped, remove the cap and top up the liquid.
- 5 Check the cooling system for leaks and the radiator/expansion vessel for correct coolant level.
- 6* You are unable to find an error: Call a specialist to remedy the problem.

Hydraulic oil temperature



The **Hydraulic oil temperature control lamp** lights as soon as the oil temperature exceeds 85°C. As soon as the temperature exceeds 95°C, error F32 appears as well. In this condition, the machine can only be driven at 1 km/h and the vibration can no longer be switched on. The machine may only be driven normally again after the temperature has gone below 95°C.

- 1 Check the function of the hydraulic oil radiator fan.
- 2 Clean heavy soiling from the radiator body.

Emergency stop



If the **emergency-stop control lamp** lights up while the ignition is on, observe the following:

- 1 Release the Emergency Stop button by turning it clockwise (red mushroom button on the instrument panel).
- 2 Put the operating lever into neutral position.
- 3 Sit on the driver's seat.
- 4* If the control lamp still continues to be lit: Call a specialist to remedy the problem.

Diesel reserve



After the **Diesel reserve control lamp** lights up for the first time, the fuel in the tank will last at least ½ h.

- 1 Top up diesel fuel.

The tank holds 43 liters of diesel fuel.

Pre-heating



The pre-heating time amounts to about 15 sec. When the motor is started, the **Pre-heating control lamp** goes off.

Brake pressure



As long as the **control lamp for brake pressure** is lit, the brake release and supply pressure of the hydraulic system is not sufficient. **As long as this control lamp is lit, the machine cannot be driven.**

- 1 Check whether the seat contact switch is closed.
- 2 Check whether errors are displayed.
- 3* The seat contact switch is closed and the control lamp is still lit: Call a specialist to remedy the problem.

Parking light



The **Parking light control lamp** remains lit as long as the parking lights are switched on.

Dipped lights

The **Dipped lights control lamp** remains lit as long as the dipped lights are switched on.

Indicators

The **Indicator control lamp** remains lit as long as the blinker is switched on.

5.2 Error code

The current operating state and the errors recognized by the controller are displayed above the hour counter.

5.2.1 Display upon start-up

If the machine is not in operation, e.g. the seat contact is not closed, the issue preventing start-up will be displayed:

Tab. 5-1 Error code upon start-up

Display	Error	Remedy
-11	Seat contact open	Sit down
-12	Operating lever is deflected	Put the operating lever in the neutral position
-13	2 operating levers (optional), both operating levers deflected	Put the operating lever in the neutral position
-14	Parking brake is activated	Release parking brake
-15	Diesel engine is not running	Start the engine

NOTE

The display remains blank when the machine is in operation, in other words, when it is being driven and/or is vibrating.

If errors are recognized, the error warning lamp lights in addition to the display of the error code. If more than one error is present, they will be displayed one after the other at an interval of about 5 sec.

5.2.2 Displays during operation

Tab. 5-2 Error code during operation

Display	Error	Effect	Remedy
F21	Operating lever right	Vehicle standstill. Limited driving is possible with operating lever left, if present.	Check sensor, wiring harness and connector of the RC.
F22	Move operating lever, neutral switch to right	Vehicle standstill. Limited driving is possible with operating lever left, if present.	Check sensor, wiring harness and connector of the RC.
F23	Operating lever left	Vehicle standstill. Limited driving is possible with operating lever right.	Check sensor, wiring harness and connector of the RC.
F24	Move operating lever, neutral switch to left	Vehicle standstill. Limited driving is possible with operating lever right.	Check sensor, wiring harness and connector of the RC.
F25	Sprinkler potentiometer	Sprinkler function switched off.	Check sensor, wiring harness and connector of the RC.
F26	Oil temperature sensor	Temperature control switched off.	Check sensor, wiring harness and connector of the RC.

Display	Error	Effect	Remedy
F27	PWM pump Forwards	Vehicle standstill. Driving in direction of travel backwards is possible.	Check magnet, wiring harness and connector of the RC.
F28	PWM pump backwards	Vehicle standstill. Driving in direction of travel forwards is possible.	Check magnet, wiring harness and connector of the RC.
F29	Vibration relay	Vibration is no longer actuated	Check magnet, wiring harness and connector of the RC.
F30	Brake valve	Vehicle standstill	Check magnet, wiring harness and connector of the RC.
F31	Low voltage	Vehicle standstill	Supply voltage
F32	Oil temperature too high	Driving in emergency driving mode is possible if pump has no longer been actuated.	Wait until the oil temperature sinks.
F33	Power supply, 8V	No reaction	Check supply voltage, replace controller unit.
F34	Power supply, 2.5V	Vehicle standstill. Controller central switch is opened.	Check supply voltage, replace controller unit.
F35	Ability of pump to be switched off	Vehicle standstill. Apart from the digits of the display unit, no outputs are actuated.	Check drive pump magnets, wiring harness and connector of the RC. Replace controller.
F36	PWM pump flow, forwards	Vehicle standstill.	Check drive pump magnets, wiring harness and connector of the RC. Replace controller.
F37	PWM pump flow, backwards	Vehicle standstill.	Check drive pump magnets, wiring harness and connector of the RC. Replace controller.
F38	Wrong direction of travel	Vehicle standstill.	Replace controller. Check wiring harness and connector of the RC.
F39	Current when control lever in neutral	Vehicle standstill.	Replace controller. Check wiring harness and connector of the RC.
F40	Program sequence	Vehicle standstill.	Replace controller.
F41	Starting condition	Apart from the digits of the display unit, no outputs are actuated.	Check supply voltage.
F42	Asphalt temperature sensor	No temperature display	Check sensor, wiring harness and connector of the RC.

Tab. 5-3 BUS error message

Display	Effect	Remedy
BUS	No connection is present between the controller unit and the display unit. The following functions are not available: • Oil temperature warning lamp. • Brake pressure lamp. • Error warning lamp. • Seat contact warning buzzer. • Reversing alarm. • Sprinkler. ◦ still available via operating lever button (not on K machines). • Fault display.	Check wiring harness, display unit and controller unit.

NOTE Depending on the respective error, you must turn the ignition off and then on again before once again beginning operation of the roller.

6

Commissioning

6.1 Commissioning

NOTE

Familiarize yourself with the manual before commissioning.

In order to begin operating the roller (driving), the following conditions must be fulfilled:

- Joint protection is opened.
- Motor is started.
- Seat contact is closed.
- Operating lever is in the neutral position.
- Parking brake is not activated.


In order to be able to activate the vibration, the work gear must also be activated.

6.1.1

Roller with pneumatic wheel (combined roller)



- If using a combined roller, you must check tire pressure and adjust as required. The ex works pressure is set to 2.5 bar.
- Tire pressure must be adjusted to suit the compaction condition of the ground:

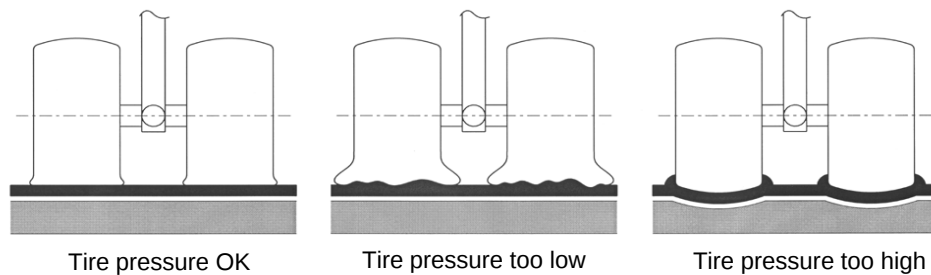

NOTE

The tires must be replaced if the fabric is visible on the tire surface.

6.1.2

Wide tires

Valves

Two tires on each side are connected to each other. The valves for inflating the tires come through the same opening.

The valve **(1)** with the hose leads to the inner tire.

The valve **(2)** with the tube leads to the outer tire.



Fig. 6-1 Valves on wide tires ARX 4




Operation

7.1 Rollover bar (ROPS)

	⚠ DANGER
	Danger to life through overturning of the roller! • During operation, fold the ROPS upward. • Fold the ROPS down only for transport.

7.1.1 Folding the ROPS upward

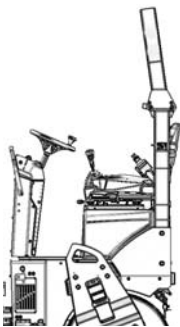

- 1 Remove the split pin.
- 2 Remove the bolt.
 - 2.1 Place the parts on the rear water tank or on the seat. They should be easy to reach when you come to refit them.
- 3 Lift the ROPS until it remains upright alone.
- 4 Pull the ROPS all the way up.
 - 4.1 To do so, stand on the driver's position.
- 5 Fit the two bolts.
 - 5.1 You may need to use a pipe extension to help in tightening the bolts.
 - 5.2 Lubricate the bolts (e.g. Never Seez mounting grease).
- 6 Place the split pins into the bolts.



Fig. 7-1 ROPS down / ROPS up

Tab. 7-1 Torque: Threaded bolt for ROPS joint

Bolt diameter	Steel quality	Tightening torque in Nm
M18	S355	147 Nm (30 kg on 50 cm lever)

NOTE

Both sides must be secured with bolts and split pins during operation.

	▲ WARNING
	Danger of accident due to unsecured ROPS! The ROPS can fall as soon as it crosses its center of gravity. • Never stand below the ROPS when lowering.

7.2 Driver's seat

7.2.1 Safety information

	▲ DANGER
	Danger to life through distraction! • Never adjust the driver's seat while driving, as you will lose control of the roller.

	▲ DANGER
	Danger to life through being thrown out! • Always wear the safety belt. Together with the rollover bar the safety belt is a safety system that can save your life.

	▲ DANGER
	There is a risk of crushing when the roller moves out to the sides. • Never place your feet on the bend of the floor panel.



Fig. 7-2 Danger to foot of crushing

7.2.2 Adjusting the driver's seat

NOTE

The driver's seat is important for your health. Adjust the seat to suit your body size.



Fig. 7-3 Driver's seat

- 1 Backrest
- 2 Weight
- 3 Forward/backward adjustment
- 4 Transverse adjustment

Setting Backrest



- 1 Move the lever upward or downward.

The tension of the suspension can be adjusted to suit the weight of the driver.

Setting Weight



- 1 Turn the adjusting knob:
 - 2a **Toward right:** The spring tension of the seat will be reduced.
 - 2b **Toward left:** The spring tension of the seat will be increased.

Weight adjustment is infinite in the range of 50 - 120 kg.

Forward/backward adjustment

- 1 Pull the lever slightly upward.
 - 1.1 Place the seat in the desired position.

NOTE

If adjusted ergonomically forward/backward, your feet will be on the floor panel.

Transverse adjustment

- 1 Pull the lever slightly upward.
 - 1.1 Place the seat in the desired position.

7.3

Protection against vandalism

Always fold the vandalism protection cover upward before start-up of the roller.

The vandalism protection cover protects the instrument panel from:

- the effects of weathering
- vandalism
- alterations by third parties

If you wish to secure the instrument panel from unauthorized access by third parties, you can install a padlock on the loop provided for this purpose.

Commercially available padlocks can be obtained in any building supplies store.

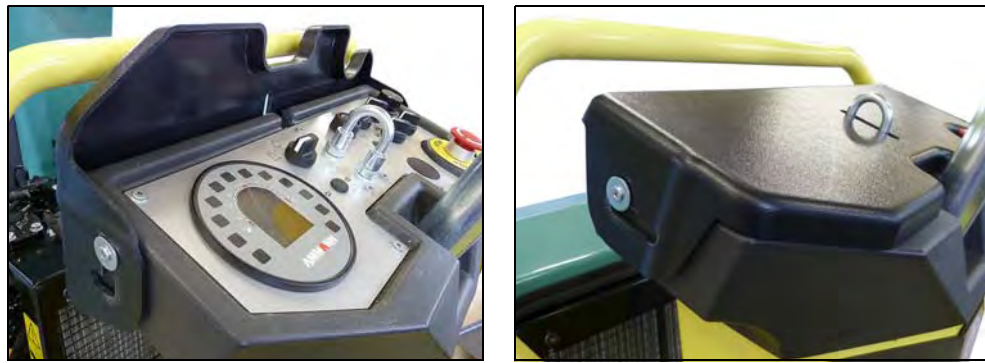


Fig. 7-4 Vandalism protection cover opened / closed

7.4 Starting the engine

7.4.1 Ignition switch



- | | |
|------------|--|
| P | PARK
In this position you can switch on the parking light. The remaining electrical loads are off. |
| 0 | Off
All electrical loads are off. |
| I | Ignition on
All electrical consumers can be switched on. |
| II | Pre-heating |
| III | Start |

7.4.2 Starting the engine

- 1 Fold the vandalism protection cover all the way back.
- 2 Move the operating lever into the neutral position until it locks in.
- 3 Put the speed adjusting lever into the idle position.
- 4 Turn the ignition key clockwise to position III.
- 5* As soon as the engine starts up release the ignition key.



Fig. 7-5 Starting motor / position of operating lever and speed adjusting lever

NOTE

The control lamps for engine oil pressure, charging, hydraulic brake release/supply pressure light up when the ignition is switched on. They extinguish once the engine is running.

Pre-heating


If the outside temperature is below 0°C:

- 1** Turn the ignition key to position II
 - 1.1** hold it in this position for 15sec.
- 2** Turn the ignition key further to position III.

NOTE

When starting and driving the roller from cold, with cold hydraulic oil, braking distances are longer than when the oil has reached normal working temperature.

7.5 Driving and braking

7.5.1 Setting the speed

Speed adjusting lever



The roller has one operating speed.

- 1a Idling speed:** Move the speed adjusting lever downward.
- 1b Operating speed:** Move the speed adjusting lever towards the right at the top.
- 2** Check whether the steering is working.

7.5.2 Driving

Driving forwards

- 1** Push the operating lever forward slowly.



The roller moves forward.

Slowing down

- 1** Slowly pull the operating lever into neutral position.



The roller is automatically hydrostatically braked.

Driving back-

- 1 Pull the operating lever back slowly.

The roller moves backward.



wards

Slowing down

- 1 Slowly pull the operating lever into the neutral position.

The roller is automatically hydrostatically braked.



NOTE

If the operating lever is released it does not automatically return to the neutral position. The lever remains at its current position.

NOTE

If the operating lever is jerked over the neutral position, e.g. as a result of an emergency situation, the machine will stop.

7.6

Work gear / transport gear



The roller is equipped with two gears.

- 1 Turn the switch:
- 2a **toward the left:** the hydraulic system is switched to the "transport gear" drive position. The vibration **cannot** be switched on now. The roller drives at a high speed.
- 2b **toward the right:** the hydraulic system is switched to the "work gear" drive position. The vibration can now be switched on as well. The roller drives at a low speed.

7.7

Turning off the engine

- 1 Put the operating lever into neutral position.

The roller is automatically hydrostatically braked.

- 2 Move the speed adjusting lever downward into the idle position.
- 3 Turn the ignition key:

4a to position 0: The engine stops.

4b to position P: The parking lights will be switched on.

NOTE

The hazard warning light can be switched on and off independently of the ignition key position.

7.8

Parking brake

Parking brake



All rollers are equipped with a parking brake switch. This switch activates the parking brake compulsorily. In this condition, the roller neither be moved nor can the vibration be activated. This function can be used to prevent the roller from slowly rolling on slopes.

The driver **must** activate the parking brake when leaving the roller.

NOTE

Increased parking brake wear.

- The parking brake may not be activated while driving, but only when the roller is at a standstill.

7.9

Seat switch

The roller can only be put into operation when the seat switch is closed, i.e. the driver is seated on the driver's seat.

7.9.1

Opening the seat switch

If the seat switch is opened during operation (the driver stands up), the roller will stop after a brief delay of 0.7 sec.

NOTE

The seat switch can be opened when:

- the driver leans out to the side and no longer sits on the seat with his full weight.
- the driver is too light. In this case, adjust the seat for the driver using the weight adjustment.

7.9.2

Closing the seat switch

- Put the operating lever into the neutral position.
 - You can leave the speed adjusting lever in its previous position.
- Start the roller by moving the operating lever.

NOTE

If the driver sits down again within the delay period, the roller continues to drive normally.

7.10 Emergency stop

If you get into an emergency situation requiring an immediate standstill of the roller, then press the emergency stop on the instrument panel.

7.10.1 *Initiating an emergency stop*

Emergency stop



- 1 Press the emergency-stop button.

The roller comes to a standstill immediately. The engine shuts down immediately and automatically. The brakes are activated.

NOTE

Only press the emergency stop in an emergency.

7.10.2 *Releasing the emergency stop*

- 1 Put the operating lever into the neutral position.
- 2 Move the speed adjusting lever all the way back.
- 3 Now turn the emergency stop button slightly in the direction of the arrow until its clicks out.

The roller is now ready for operation.

NOTE

Release the emergency stop button by pulling upwards in the "pull-push" version. The direction arrows are missing from this button.

7.11 Locking brake

The vibration roller is equipped with an automatic locking brake.

The brakes for the drive motors work:

- When the supply pressure falls below 12 bar.
- When you activate the emergency-stop button.
 - When you press the Emergency Stop button a valve reduces supply pressure and the brakes take immediate effect.
- When you activate the parking brake.
 - When you activate the parking brake, a valve reduces the supply pressure and the brakes take immediate effect.

The locking brake closes automatically when the diesel engine is switched off.

NOTE

Brake wear due to unnecessary emergency stops!

- In order to save the brakes from unnecessary wear, only perform an emergency stop in emergency situations when driving.
- Only use the locking brake in special cases, e.g. when you stop on a slope. If the roller starts to roll, move the operating lever slightly in the opposite direction, so that the vehicle is kept still hydrostatically.

7.12 Sprinkling

7.12.1 Checking water level

Water level indicator



1 You can read the water level on the water level indicator at the rear left:

2a full: You can switch sprinkling on.

2b empty: First refill with water.

7.12.2 Refilling with water

1 Open the screw lid of the water tank at the rear right.

1.1 Use the roller's ignition key to unlock the tank screw lid.

2 Pour water in .



Fig. 7-6 Water tank cover rear right

7.12.3 Switching on continuous sprinkling

On the instrument panel 1 Turn the sprinkler switch from **Pos. 0** to **Pos. 1**.

The sprinkler switches on.



On the operating lever 1 Press the bottom button (1).

The sprinkler stays on as long as you are pressing the button.



NOTE

In the combined roller, operating lever sprinkling is used only for tire sprinkling.

7.12.4 Switch on interval sprinkling



1 Turn the sprinkler switch from **Pos. 0** to **Pos. 1**.

The sprinkler switches on.

2 Turn the switch further to the right.

The interval sprinkler switches on.

3* Interval times: Turn the switch continuously toward the right to adjust the sprinkling intervals infinitely.

Item 0 OFF

Item 1 Interval sprinkler

7.13 Simple/double vibration



⚠ WARNING

Danger to life through slipping or caving in of the roller!

- Do not use vibration on steep embankments or at steep angles!
- Do not vibrate inside buildings and on unstable ground!

NOTE

Damage to material due to harsh vibration movement.

- **Never use vibration while idling!**
- **Never use vibration while at a standstill!**
- **Only switch vibration on if the speed adjusting lever is set to an operating speed.**

7.13.1
Preselecting the frequency

Frequency



- 1** Turn the switch:
- 2a Toward the left:** High frequency / low amplitude. 
- 2b To the center:** Low frequency / low amplitude 
- 2c Towards the right:** High amplitude / low frequency. 

7.13.2
Vibration on / off

Presetting



- 1** Turn the switch:
- 2a Toward the left:** The roller only vibrates at the front. 
- 2b toward right:** The roller vibrates both at the front and the rear. 

NOTE

When switching from double to single vibration, there is a brief interruption of the vibration.

Switching on / off



- 1** Press the top button briefly on the operating lever **(1)**.
Vibration switches **on**.
- 2** Press the top button again on the operating lever **(1)**.
Vibration switches **off**.

7.14
Vibration automation

In automatic mode vibration is switched on at speeds greater than 1-2 km/h and off at speeds less than 1-2 km/h.

Vibration is not possible with the roller at a standstill.

	⚠ WARNING
	Unintentional reaction / accident hazard If the vibration automation pre-select switch is set to automatic and vibration is activated, the roller begins to vibrate as soon as the operating lever is pushed forwards. If the driver is surprised by this reaction an uncontrolled and hazardous action may result.

7.14.1

Manual vibration




1 Set the pre-select switch to the **"Manual" position** .

2 Press the vibration button (upper button) on the operating lever.

The roller vibrates.

7.14.2

Automatic vibration

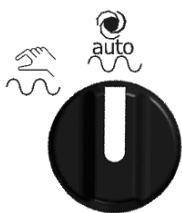

1 Set the pre-select switch to the **"Auto" position** .

The roller vibrates as soon as vibration is activated and the roller reaches a speed of 1-2 km/h.

The minimum speed can be changed if desired. Ask your authorized dealer.



Options

8.1 Edge cutter

	⚠ DANGER
	Risk of injury when lowering cutting disk or pressure disk • Keep personell out of the hazard zone when raising and lowering the edge cutter. Keep to a safety distance of at least 1 m.


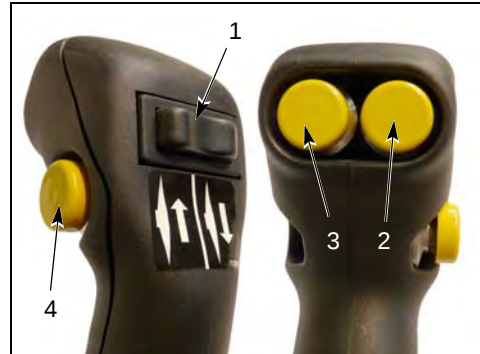


Fig. 8-1 Edge cutter / Multi-function operating lever

- 1 Raising/lowering the edge cutter.
- 2 Roller drum sprinkler
- 3 Edge cutter water
- 4 Vibration on/off

8.1.1 Presetting edge cutter

Vibration

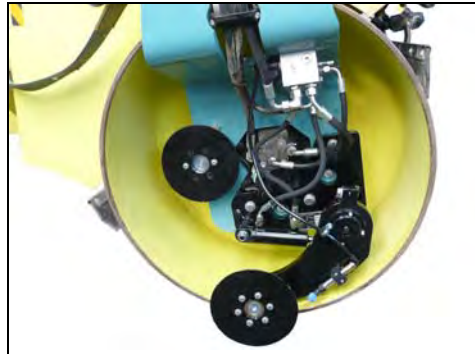

- 1 Before operating the edge cutter, set the pre-select switch to "front vibration".

NOTE

The edge cutter only operates correctly in this setting. If the pre-select is set incorrectly, it will malfunction (vibration will be switched on, pavement will be damaged).

Frequency



- 1 Before operating the edge cutter, turn the pre-select switch:
- 2a towards the left: High frequency / low amplitude or
- 2b to the center: Low frequency / low amplitude

NOTE The edge cutter only operates correctly with one of these two settings. If the switch is set to "high amplitude / low frequency" (towards the right), the edge cutter will not be raised automatically.

8.1.2 *Operation of the edge cutter*

- Raise/Lower* **1** Operation of the rocker switch **(1)**:
- 2a** **Lower:** As long as you press this switch right, the edge cutter is lowered.
- 2b** **Raise:**As long as you press this switch left, the edge cutter is raised.
- Sprinkling* **1** Press the "**Sprinkler**" **(2)** button. The roller drum sprinkler is switched on for as long as the "Sprinkler" button is pressed.
- Water supply* **1** Pressing the "**Water**" **(3)** button switches on the water supply for the edge cutter.

NOTE The water supply only works if continuous roller drum sprinkling is switched on.

- Vibration* **1** Press the "**Vibration**" **(4)** button.
- The vibration switches on.

NOTE When the vibration is switched on, the edge cutter is raised automatically. The edge cutter is nonfunctional.

8.1.3 *Disks*

A **cutting disk** and a **pressure disk** are included in the edge cutter's scope of delivery.

- Cutting disk* Using the **cutting disk (1)** the pavement can be cut at the required position or pavement edges can be straightened.

- Pressure disk* The pavement edges are compacted at an angle using the **pressure disk (2)**.

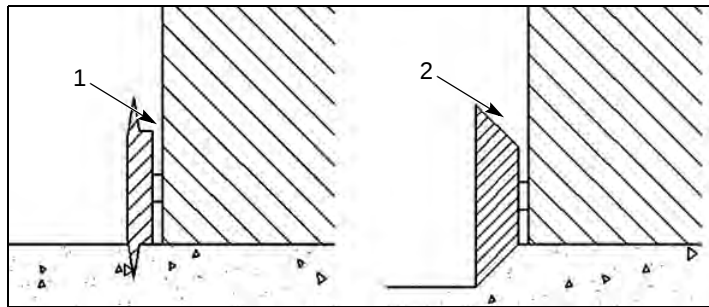


Fig. 8-2 Cutting disk and pressure disk in use

Storage

If one of the two disks is not being used, fix it to the mounting provided on the right side of the roller.

	⚠ WARNING
	Risk of injury! The disk can loosen and injure nearby persons! • Check the fastening screws when replacing the disks. Tighten the screws well on both the edge cutter and the mounting. See table , Tightening torques.

1208531 | 03.07.2012

8.2 2 operating levers



Fig. 8-3 2 operating levers

It is only possible to drive with one operating lever. The unused operating lever must be in the neutral position.

The operating buttons are always active.

Driving with the left operating lever


- 1** Move the right operating lever to the neutral position.
- 2** Driving with the left operating lever

Driving with the right operating lever

- 1 Move the left operating lever to the neutral position.
- 2 Driving with the right operating lever

8.3

Rear work light and revolving warning light

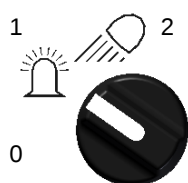

Switching the work light and the revolving warning light on and off:

- 1 Turn the switch:
- 2a **to position 0:** Both the work light and the revolving warning light are switched off.
- 2b **to position 1:** The rear revolving warning light is switched on. 
- 2c **to position 2:** Both the rear work light and the revolving warning light are switched on. 

NOTE


If the roller is no longer fitted with a revolving warning light, only the work light is lit.

8.4

Revolving warning light

8.4.1

Switching on the revolving warning light

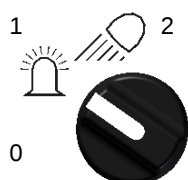

- 1 Turn the switch:
- 2a **to position 1:** The revolving warning light is switched on. 

The roller may be fitted with a revolving warning light, but the corresponding switch may be missing. In this case the revolving warning light operates continuously as soon as the ignition key is in position II.

8.4.2

Positions of the revolving warning light

in operation

The revolving warning light is located at the rear on the rollover bar (ROPS) during operation.

not in operation

Fold the rollover protection (ROPS) down for transport or during extended periods of non-use.

- 1 Move the driver's seat to the center.
- 2 Fasten the revolving warning light to the mounting on the inner left side of the rollover bar (ROPS).

Secure the parking brake firmly.

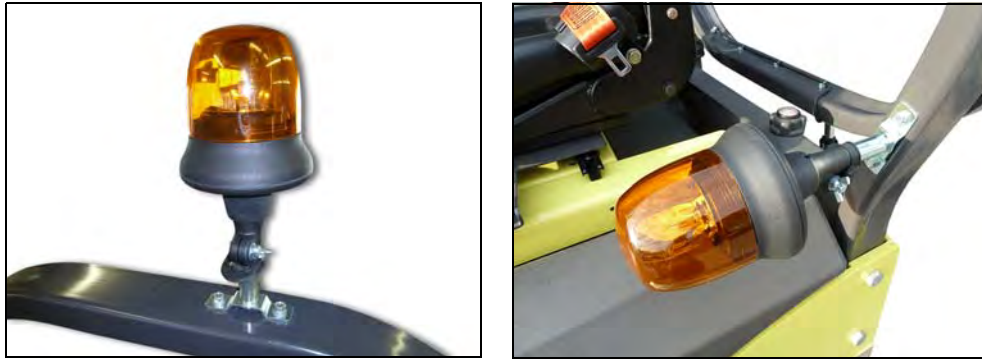


Fig. 8-4 Revolving warning light in operation / not in operation

8.4.3

Replacing the bulb



- 1 Unscrew the theft-protection screw (1).
- 2 Lift the cover off with a twisting motion toward the right (2).
- 3 Press the two lugs of the bulb holder (3) together.
- 4 Remove the bulb from the holder.
- 5 Pull the bulb out of the connector.
- 6 Replace the defective bulb with a new one of the same type and wattage.



Fig. 8-5 Replacing the bulb

NOTE

Do not touch the glass of the new bulb with your fingers. Sweat on your hands can burn into the glass and reduce bulb lifetime.

8.5

Roof



The roof option serves as all-weather protection. You can use the roof to protect from sun and rain.

8.5.1 *Transport with ROPS folded down*

During transport with the ROPS folded down, e.g. in a container or closed truck, you must remove the whole roof.

8.5.2 *Fitting / removing the roof*

Please note the work/assembly instructions contained in the delivery: (ANW-4397 roof option).

Fitting the roof **1** Screw the roof to the ROPS with the four Allen screws and washers.

1.1 Make sure that the screws are always firmly tightened.

Roof with revolving warning light **1** Loosen the wing nuts of the revolving warning light.

2 Lift the warning light out of the holder.

8.5.3 *Transport with ROPS folded up*

	⚠ WARNING
	Material damage and hazard to road traffic The pressure of the head wind can cause the material to tear or come off and endanger traffic coming from behind. • You must remove the tarpaulin during transport on an open truck.

8.5.4 *Removing the tarpaulin*

1 Detach the hook-and-pile fastener on the sides and the leather straps in the corners.

2 Remove the tarpaulin.



Fig. 8-6 Removing the tarpaulin

8.6 Reversing alarm



The reverse alarm is active as soon as the roller drives backward. The alarm stays on until the roller starts to drive forward or comes to a standstill.

97dB +/- 4dB to SAE J 994, Oct. 03

	⚠ DANGER
	Rollover hazard when driving the roller! - Get out of the danger zone immediately! - No persons may stand in front of or behind the roller while it is in operation.

8.7 Battery cut-off switch

The battery cut-off switch interrupts the power supply from the battery to the roller. Switch off the battery cut-off switch if the roller is not in operation for longer than two days.

NOTE

Always disconnect the power supply when working on the electrical system.

8.7.1 Battery cut-off switch on / off

The battery cut-off switch is located under the cowling above the battery.

Switching on the power

- 1** Turn the red key of the battery cut-off switch left to horizontal position.

If fitted, the roller is now supplied by the starter battery.



Fig. 8-7 Switching on the power

Switching off the power

- 1** Turn the red key of the battery cut-off switch down to vertical position.

This interrupts the power supply.

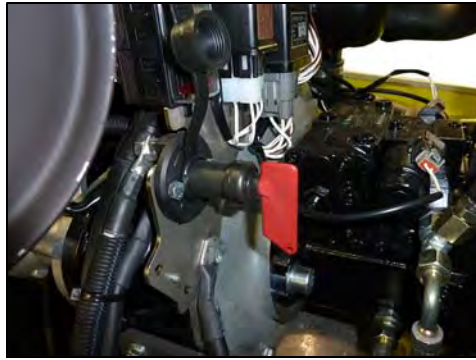


Fig. 8-8 Switching off the power

Removing
the key

- 1 Turn the red key of the battery cut-off switch right to final position.
- 2 Now you can remove the key
- 3 Close the keyhole using the cap provided.



Fig. 8-9 Removing the key

8.8 Traction aid (flow divider)

The flow divider ensures equal drive of the front and rear wheels and thus avoids free rotation of one wheel.

This function is useful for negotiating inclines with poor adhesion qualities (e.g. loading the roller via a loading ramp).

Switching on



- 1 Rotate switch **(1)** on the operating lever console towards the right.

The "traction aid" is activated and an acoustic signal is sounded.

	⚠ CAUTION
	Hydraulic system heat-up! The traction aid is active as long as the switch is in the "traction aid" position. This function is not required in normal operating mode. If constantly activated the hydraulic system is additionally unnecessarily heated. Only engage the traction aid when the machine is at standstill.

8.9

Anti-adhesive



Anti-adhesive is a water-soluble specialized liquid for combined rollers. The anti-adhesive ensures an effective separation between the pneumatic surfaces and the bitumen course.

The anti-adhesive tank filler neck is located on the left-hand side of the driver's position under the cover in the footplate.

Anti-adhesive reservoir volume: 12.5l

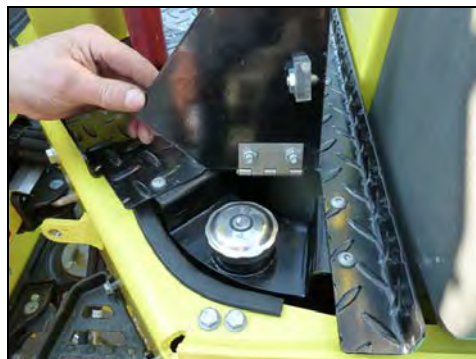


Fig. 8-10 Anti-adhesive reservoir filler neck

8.9.1

Switching on anti-adhesive



1 Press the bottom button (**1**) on the operating lever.

Anti-adhesive is admixed until you release the button.

NOTE

The water sprinkler for the roller drum is controlled via the instrument panel.

8.9.2

Advantages of anti-adhesive

- No tearing of the course thanks to the good separating effect.
- Extremely low anti-adhesive consumption.

- The course can be worked at higher temperatures.
- Lower shocking to the course due to lower water consumption.
- Anti-adhesive does not attack the pneumatic tyre rubber.
- Penetration of superfluous anti-adhesive has no subsequent negative effects.
- The anti-adhesive is **biodegradable**.

8.9.3

Anti-adhesive designations

Tab. 8-1 Anti-adhesive designations

Manufacturer	RHODORSIL
Designation	RHODORSIL EMULSION E1P
Quantity	25 kg
Mixing ratio	1.5:100
Part number	1-951318



Maintenance

9.1 General safety instructions



Maintenance **may only** be carried out by **trained personnel!**

- Only perform maintenance and repair work on the roller if it is static and secured from rolling away.
- Secure the roller with the joint protection.
- Relieve pressure before working on the hydraulic pipes.
- Disconnect the battery before commencing work on the roller's electrical systems.
 - Cover the battery with isolating material or remove it completely. This does not apply to work requiring an electric current.
 - In the event of injuries caused by acid, rinse immediately with clean water and consult a doctor.
- Replace all protection devices properly after performing maintenance and repair work.

	⚠ DANGER
	Danger to life through an unsafe work area! • Always use an accident-proof support when working on a raised roller. • Never work below a roller which is only supported by a crane or other electrical / hydraulic lifting device. • Only stand under a raised roller if it has been mechanically secured. • Only use stable loading ramps suitable for the weight of the roller for loading. • On transport vehicles, secure the roller from rolling off, slipping to the side and tipping over.

	⚠ DANGER
	Gas poisoning through letting engine run in enclosed spaces! • Do not leave the engine running in closed areas. • If use of the roller in a confined space cannot be avoided, the exhaust fumes must be extracted directly from the exhaust pipe.

	⚠ DANGER
	Danger of scalding from hot water / steam! • Never remove the expansion cap or radiator cap while the engine is running or hot! • First loosen the cap to the first stop to release the pressure. Only then remove the cap.

	⚠ DANGER
	Danger of severe injury through loose clothing being caught and drawn in! • Only open the engine hood when the engine is switched off. • If trouble shooting makes working on moving parts (engine or roller) unavoidable, never wear: necklaces, bracelets, rings, scarves, ties or other loose items of clothing. If any of these get caught in moving parts there is a danger of serious injury!

	⚠ WARNING
	Danger of scalding from hot water / steam! • Only work on a cool engine. • Keep enough distance to the exhaust.

	⚠ CAUTION
	Environmental hazard through operating materials! • Do not allow any liquids get into drains, soil or the environment.

NOTE

Damage to electrical controls through contact with water!

- Never spray the water jet into electrical or electronic components.
- Never spray into the engine combustion air intake.

NOTE

**Damage to hydraulic controls through use of wrong oil!
Hydraulic tubes decompose.**

- It is forbidden to change used rollers for use with biodegradable hydraulic oils!
- If hydraulic hoses on a roller running on synthetic ester HE need replacing, only those declared by the supplier as being compatible with synthetic esters may be used.

9.1.1

Battery safety instructions

	⚠ DANGER Risk of serious injury through leaking battery acid! The sulfuric acid in the battery is poisonous and so strong it can burn holes in clothes and dissolve skin. If it gets into eyes it can lead to blindness. • Protect the battery from fire, flames and sparks. • Protect the battery from mechanical damage.
	⚠ DANGER Risk of explosion when charging battery! • Never check the battery charge level with a metal object. Use a voltmeter or the battery's charge indicator. • When disconnecting the battery always disconnect the negative terminal first (-). • Connect the positive terminal (+) first when reconnecting.

NOTE

Doing welding work on the roller when the battery is installed can damage the electrical controls!

- Always remove the battery completely before performing welding work on the roller.

NOTE

Always replace the battery with a service-free battery. If you are using a battery that requires maintenance, always observe the safety instructions in the battery manual.

9.2

General information about maintenance

NOTE

Not all maintenance tasks are listed in these operating and maintenance instructions. We would also like to point out the separate manual for the Yanmar engine.

- When carrying out maintenance work always observe the applicable safety regulations in the 3 *Safety information*, Page 27 section.
- Maintenance work and inspections must be performed according to the following maintenance tables in order to guarantee reliable roller operation.
- Remove all dirt before taking off any covers, plugs, measuring rods, etc. to inspect or top up engine oil, hydraulic oil, diesel or other liquids.
- Any parts that do not pass the following inspections must be replaced immediately.

The protective devices must be correctly refitted after every service.

9.3 Maintenance ARX 4

9.3.1 Maintenance plan

Maintenance intervals in operating hours [h] and in calendar periods [daily, weekly, monthly, quarterly, semi annually, annually]								Check, inspect, test, correct, set up		Chapter / D = information from dealer
Clean, drain								Lubricate, treat		Object, condition
Exchange, replace								Object, condition		Object, condition
10	50	100	250	500	1000	as needed				
1 day	1 week	1 month	3 months	6 months	1 year					
•	•						•			9.12
•		•					•			•
•			•				•			•
•				•			•			•
•						•	•			9.9
•							•			•
•							•			9.11
•							•			9.13.4
•							•			9.8
•							•			9.10
•							•		•	8.4.3
•							•		•	10.3
•							•	•		•
•							•			9.13.2

10 1 day	50 1 week	100 1 month	250 3 months	500 6 months	1000 1 year	as needed					Object, condition	
	(*) 1st		(*) 2nd	•							Engine oil / engine oil filter	9.9.4
	•				•	•					Brake test	9.13.6
	•										Seat contact / emergency stop	9.13.5
		•				•				•	Steering cylinder bearing	9.14
			•			•					Hydraulic system leaks	-
				(*) 1st	•	•				•	Hydraulic oil tank ventilation filter	9.10.6
				(*) 1st	•					•	Hydraulic oil / hydraulic oil filter	9.10.5
				•						•	Fuel filter element	9.8.5
				•		•					Water separator filter element	9.8.6
				•		•				•	Air filter cartridge	9.13.4
					•						Cleaning the fuel tank	9.8.4
					•	•				•	Roller drum rubber elements	H
					•						Web plate tension sleeve thickness <17 mm	H
					•						Hood gas strut	10.4
						•				•	Fuel hoses	-
						•				•	Hydraulic hoses	H
						•				•	Battery	10.1
						•				•	Cooling water radiator	9.12

Object, condition								10.2
10 1 day	50 1 week	100 1 month	250 3 months	500 6 months	1000 1 year	as needed	•	Relays and fuses
							•	Preparation for welding work
							•	Roller drum bearings / roller drum maintenance
							•	Hood hinges

NOTE

Please also observe the Yanmar engine operating instructions and the detailed instructions given there.

9.4

Maintenance check sheet

Roller, serial no. _____

[illegible]

9.5

Towing



Only tow the roller in an emergency in order to move the machine away from the danger zone.

	⚠ WARNING
	Risk of accident through improper towing! Adhere to the following rules: • Maximum towing speed: 1 km/h • Maximum towing distance: 10m • Then transport the roller by truck or trailer.

Before you can tow the roller you must release the integrated parking brake.

9.5.1

Releasing brakes

	⚠ DANGER
	Danger to life through runaway roller. Persons standing in the vicinity can be rolled over! • Before releasing the brakes, be absolutely certain to secure the roller against unintentional rolling away.



Fig. 9-1 Use chocks to prevent the roller from rolling away

Articulated joint lock

- 1 Secure the roller with the joint protection.
 - 1.1 See *Joint protection*, Page 130.



- 1 Use a wrench (size 19) to undo the brake pads.

The brake release chocks are in the front chassis, to the left under the light, and are secured with two M12x35 bolts.

- 2 Remove the brake release chocks (1).

The two screws also act as tension screws.

- 3 Remove the protective caps (2) on the front and rear drive motor.

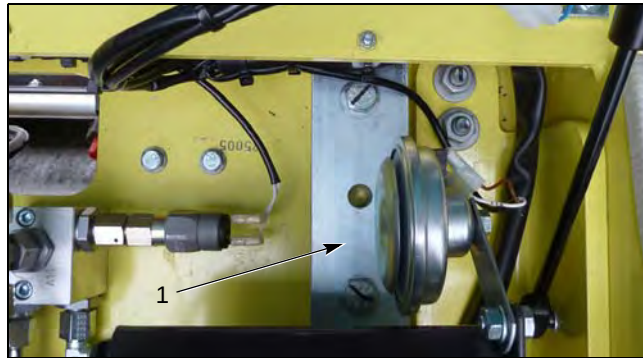


Fig. 9-2 Release brake chocks / remove protective caps

- 4 Screw the brake release chock onto the front left drive motor.
 - 4.1 Turn the screw in by hand.
- 5 Turn the wrench approx. one half turn downward. Wrench rotation on the motor approx. 180°.
- 6 Follow the same procedure for the rear right drive motor.

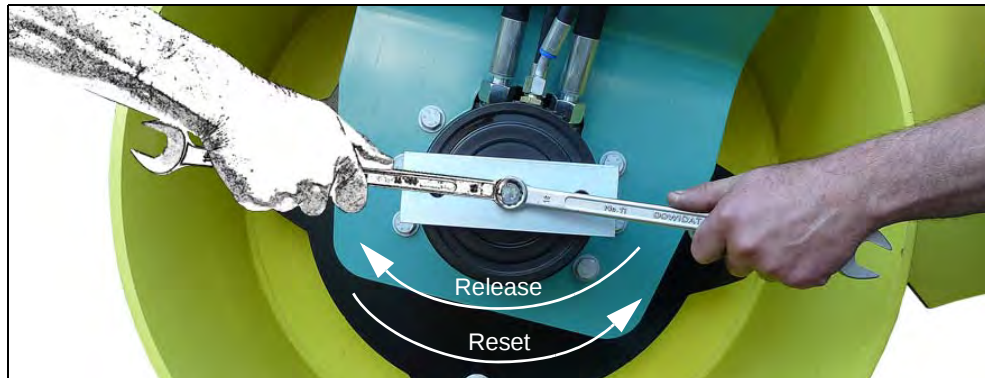


Fig. 9-3 Releasing brakes

The brakes have been released, you can now tow the roller.

NOTE

After you have towed the roller, retighten the brakes and stow the brake release chocks in the front chassis once again.

9.6

Opening the hood

	⚠ DANGER
	Danger of severe injury through loose clothing being caught and drawn in! • Only open the engine hood when the engine is switched off. • If trouble shooting makes working on moving parts (engine or roller) unavoidable, never wear: Necklaces, bracelets, rings, scarves, ties or other loose items of clothing. If any of these get caught in moving parts there is a danger of serious injury!

	⚠ WARNING
	Danger of scalding from hot water / steam! • Only work on a cool engine. • Keep enough distance to the exhaust.

There is one locking device on the left and one on the right of the roller.

- 1 Open both catches, on the right and the left.
- 2 Open the hood with the handle on the left of the hood.
 - 2.1 Lift the hood with slight pressure toward the center of the roller.
 - 2.2* If the hood is defective, replace it immediately.

If you wish to secure the engine compartment from unauthorized access by third parties, you can install a padlock on the loops provided for this purpose.

Commercially available padlocks can be obtained in any building supplies store.

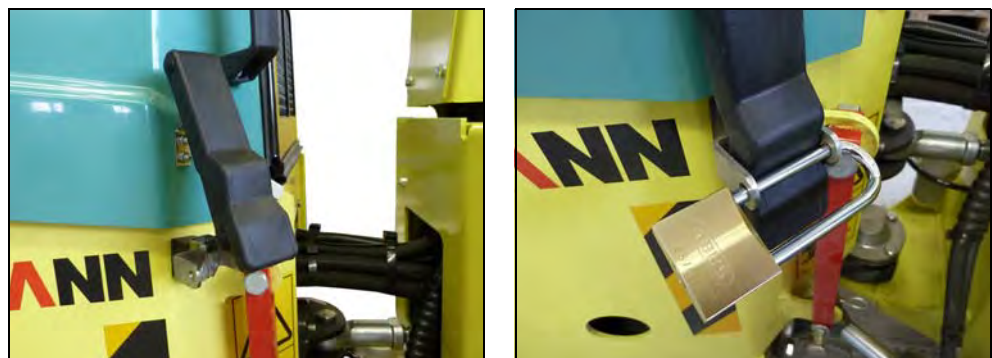


Fig. 9-4 Catch open / catch closed

NOTE

Two gas absorbers reduce the force required to open the hood and give it its final position. If you need more force to open the hood, replace the gas absorbers. See *Gas strut*, Page 122.

9.7 Engine compartment overview

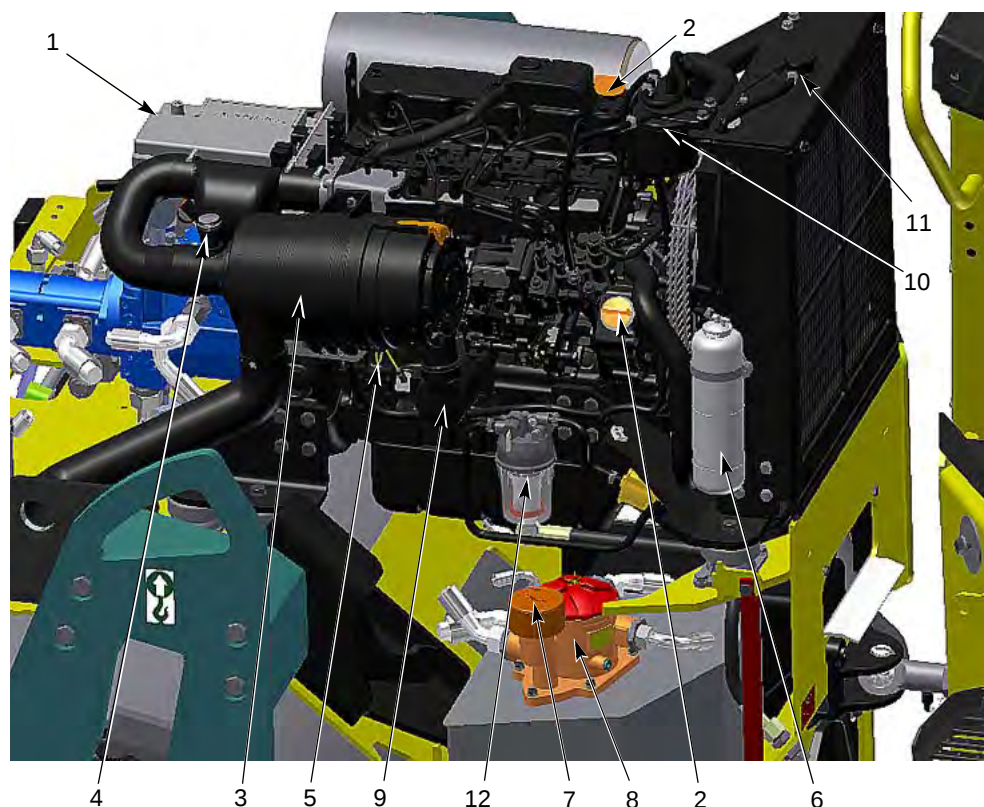


Fig. 9-5 ARX 4 engine compartment

- | | |
|----|---|
| 1 | Battery |
| 2 | Engine oil filler neck |
| 3 | Air-intake filter |
| 4 | Soiling indicator for air-intake filter |
| 5 | Oil dipstick |
| 6 | Coolant level display |
| 7 | Hydraulic oil filler neck |
| 8 | Hydraulic oil filter |
| 9 | Engine oil filter |
| 10 | Fuel filter |
| 11 | Coolant filler neck |
| 12 | Water separator |

 	⚠ WARNING Risk of burning and injury when handling parts in the engine compartment! • Switch the diesel engine off when performing any inspection work. The locking brake is active when the diesel engine is switched off.
--	--

9.8 Fuel (diesel)


9.8.1 Checking fuel level

Diesel control lamp



After the control lamp on the instrument panel lights up for the first time, the fuel in the tank will last at least ½ h.

9.8.2 Refueling

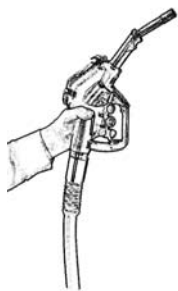

1 Fill the fuel tank with diesel fuel up to the lower edge of the filler neck.

1a Every day before beginning work, or

1b as soon as the warning lamp lights up.

The tank holds 43liters of diesel fuel.



Fig. 9-6 Diesel fuel filler neck

Diesel Specifications



Tab. 9-1 Excerpt from the Yanmar engine manual about diesel specifications

Diesel specifications	Application
No. 2-D, No.1-D, ASTM D975-94	USA
EN590:96	Europe
ISO 8217 DMX	International
BS 2869-A1 or A2	Great Britain
JIS K2204 grade no. 2	Japan
KSM-2610	Korea
GB252	China

NOTE

Poor quality diesel can:

- Reduce the performance of the engine
- Damage the engine

NOTE

For more detailed information, please see the Yanmar engine manual.

9.8.3

Draining fuel

	⚠ CAUTION Environmental hazard through operating materials! • Do not allow any liquids get into drains, soil or the environment.
---	--

- 1 Unscrew the screw plug **(1)** under the roller using a square socket wrench (13mm).
(You can find this wrench on the ratchet of the socket wrench set.)
- 2 Place a container under the drain tap.
- 3 Drain off the diesel.
- 4 Install the screw plug **(1)**.
 - 4.1 Secure the screw connections with Loctite special and tighten by hand, not with torque. Observe the table *Torque: Drain cock / hydraulic tank*, Page 112



Fig. 9-7 Diesel drain

9.8.4

Cleaning the fuel tank

Over time, condensation water gathers in the fuel tank. It must be drained once a year.

- 1 Loosen the screw plug **(1)** beneath the roller using an open-ended wrench (size 27).
- 2 Place a container under the drain tap.

- 3 Allow about **1/2 liter** of fluid to drain.

First, the water which has collected on the bottom of the tank will run out.

- 4 Install the screw plug **(1)**.

- 4.1 Secure the screw connections with Ergo 4207 and tighten by hand, not with torque. Observe the table *Torque: Drain cock / hydraulic tank*, Page 112

9.8.5

Fuel filter element



Fig. 9-8 Fuel filter

Replace fuel filter element **(1)** according to the maintenance plan.

9.8.6

Water separator filter element

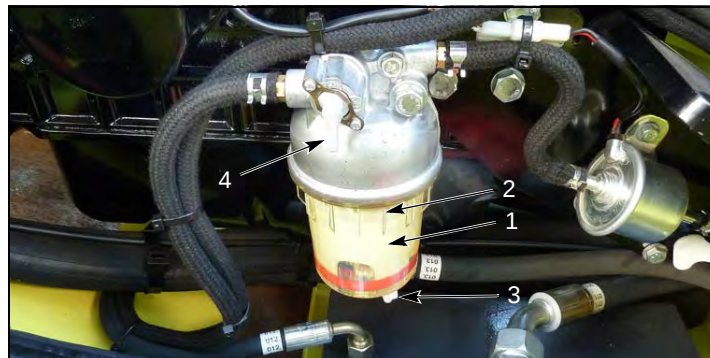


Fig. 9-9 Water separator

Drain filter housing

If the red float ring rises, the water must be drained from the housing at once.

- 1 Open drain cock **(3)**.
- 2 Allow water to drain.
- 3 Close drain cock **(3)**.

Clean filter element

Clean water separator element **(1)** according to the maintenance plan.

- 1 Close stop cock **(4)**.
 - 1.1 Move to OFF.
- 2 Unscrew the filter housing **(2)**.
- 3 Clean filter element **(1)**.
- 4 Screw the filter housing **(2)** on.
- 5 Open stop cock **(4)**.
 - 5.1 Move to ON.

9.9 Engine oil

9.9.1 Checking the engine oil level

Oil dipstick



- 1 Check engine oil level daily using the dipstick. The dipstick **(1)** is located on the left of the engine.
 - 1.1 Check oil level while the roller is standing on a level surface and the engine is cold.
 - 1.2 You can see the engine oil level on the dipstick. The oil level must be between the top **(x)** and bottom **(y)** marks.
- 2* Top up engine oil as required.

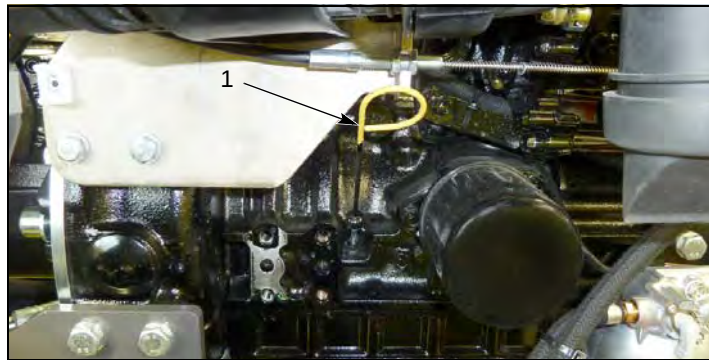


Fig. 9-10 Location of dipstick

9.9.2 Topping up the engine oil

- 1 Top up the engine oil at one of the two oil filler necks.
 - 1a Filler neck on the left-hand side of the engine.
 - 1b Filler neck on the engine.

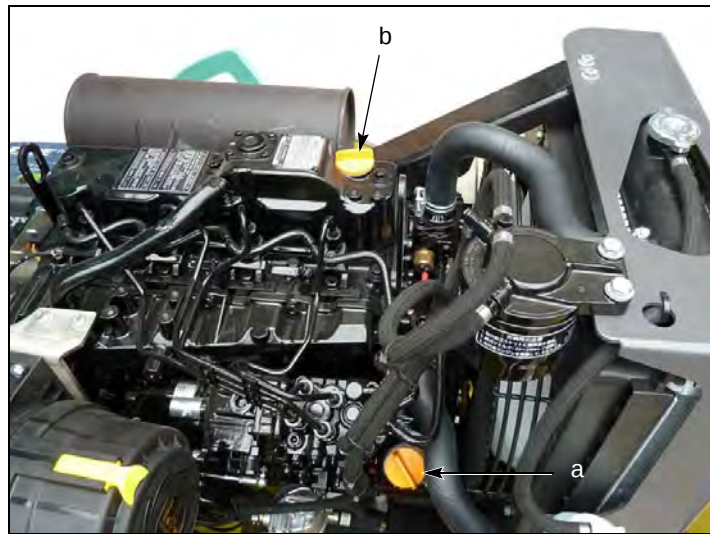


Fig. 9-11 Filler neck to the left and filler neck on top.

NOTE

In order to guarantee operating safety of the engine for the long term, you must not put any additives in the engine oil.

9.9.3

Draining engine oil

The engine oil drain is located at the front left, between the front and rear chassis.

- 1 Turn the roller all the way to the right. This provides easier access to the engine oil drain **(1)**.

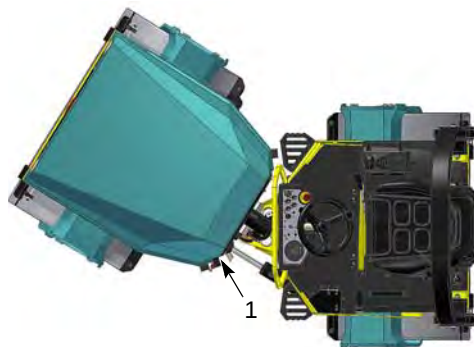


Fig. 9-12 Roller turned fully / Engine oil drain



⚠ CAUTION

Environmental hazard through operating materials!

- Do not allow any liquids get into drains, soil or the environment.

- 2 Place a container under the drain.
- 3 Open the union by turning it anti-clockwise (27 mm wrench).

The oil starts to flow out immediately.

9.9.4 Replacing engine oil filter

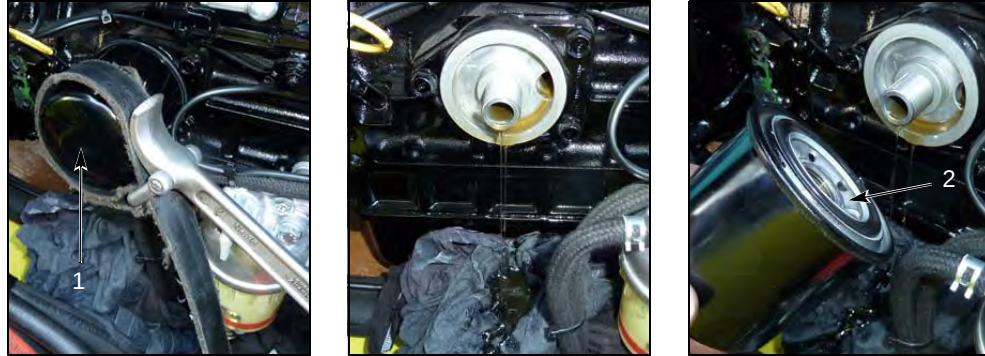


Fig. 9-13 Engine oil filter

- 1 Loosen the filter **(1)** by hand or using a filter wrench.
 - 1.1 The oil starts to flow out immediately. It's best to place a rag under it beforehand.
- 2 Replace oil filter **(2)**.
- 3 Screw the complete filter back in place.

9.10 Hydraulic oil

9.10.1 Checking the hydraulic oil level

Inspection window



Always check the hydraulic oil level at operating temperature with the engine running.

- 1 Place the roller on level ground.
- 2 Let the roller continue to idle.
- 3 Check the oil level in the inspection window.
- 4* If oil level is in the lower third of the inspection window, top up through the filler neck with 1 liter of hydraulic oil.

9.10.2 Topping up hydraulic oil

- 1 Remove the screw lid on the filler neck **(1)**.
- 2 Top up with 1 liter of hydraulic oil **(2)**.
- 3 Reinstall the screw lid **(3)**.
 - 3.1 **Important:** Always grease the O-ring before screwing it in place.



Fig. 9-14 Hydraulic oil filler neck

NOTE Observe the table of lubricants in chapter 9.15.

9.10.3 Draining the hydraulic oil

NOTE Only drain the hydraulic oil at operating temperature.

- The oil flows better.
- Residues in the tank will be flushed out with the oil.

- 1 Place a container (with at least a 30 liter capacity) under the hydraulic oil drain.
- 2 Remove the hydraulic oil tank lid.
- 3 Remove the hydraulic oil drain plug (1) under the roller.
- 4 Allow the oil to drain into the container.
- 5 Install the hydraulic oil drain plug (1).

5.1 Secure the screw connections with Loctite special and tighten by hand, not with torque. Observe the table *Torque: Drain cock / hydraulic tank*, Page 112



Fig. 9-15 Hydraulic oil drain

NOTE When you drain the hydraulic oil, please also replace the hydraulic oil filter. See chapter 9.10.5.

NOTE Tighten the screw connections in the hydraulic tank hand tight.

9.10.4 *Cleaning the hydraulic oil cooler*

- 1 Check the cooling ribs of the hydraulic oil cooler for dirt and clogging.
- 2 Clean the ribs with water or blow them out with compressed air.

NOTE

Never clean the cooler with high pressure (e.g. powerful water jet).



Fig. 9-16 Hydraulic oil cooler grill

9.10.5 *Replacing the hydraulic oil filter*

- 1 Remove the filter lid.
- 2 Unlock the filter element.
- 3 Lift the filter element out of the filter housing.
- 3.1 Dispose of the filter element in an ecologically appropriate manner.

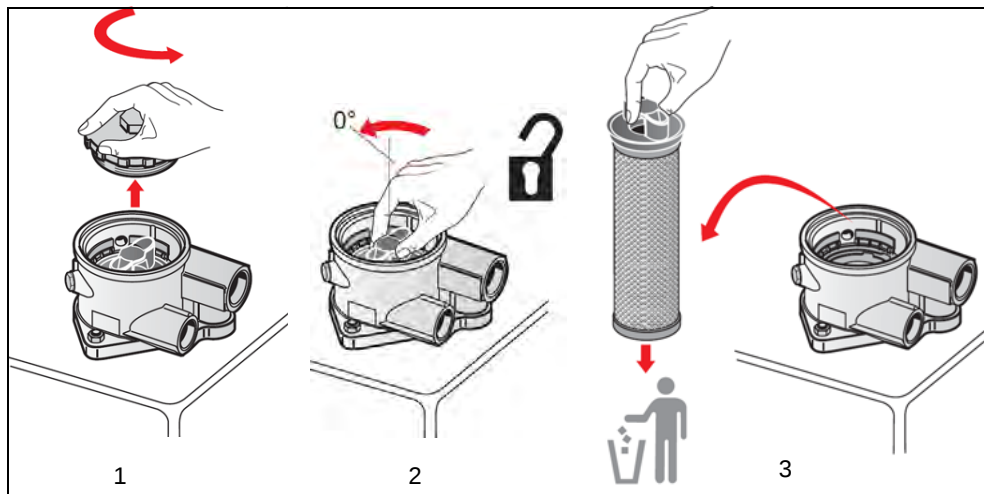


Fig. 9-17 Replacing the hydraulic oil filter, steps 1 to 3

- 4 Place the new filter element in the proper position.
 - 4.1 Observe the position of the locking cam.
- 5 Turn the filter element fully clockwise to the stop.

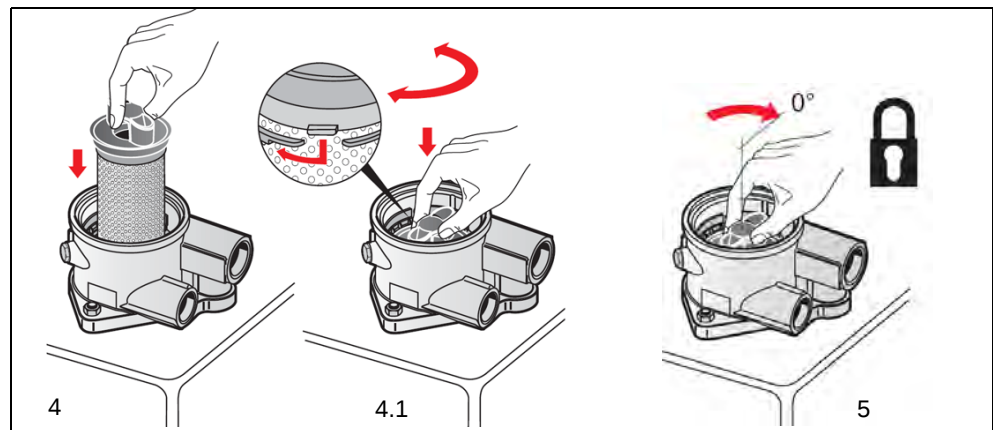


Fig. 9-18 Replacing the hydraulic oil filter, steps 4 to 6

- 6 Lightly oil the sealing ring on the filter lid.
- 7 Put the filter lid in place.
- 7.1 Tighten the lid with a torque wrench (max. torque, 20Nm).

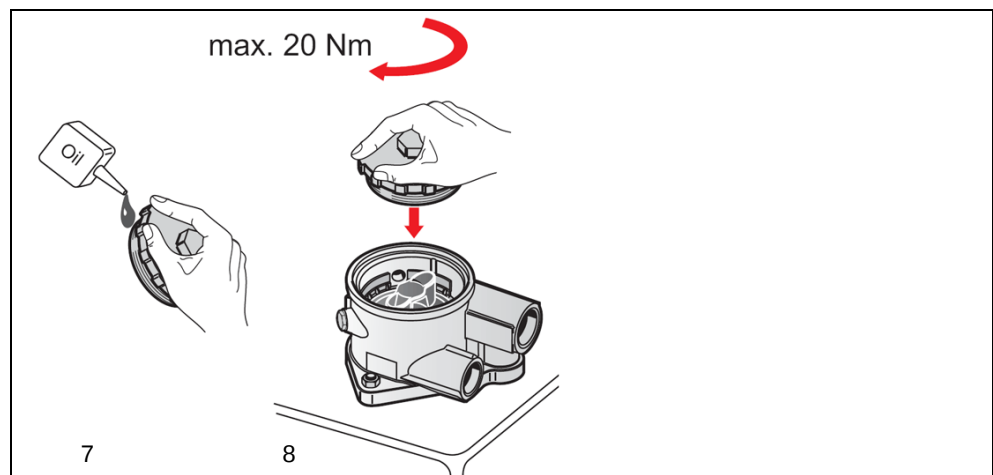


Fig. 9-19 Replacing the hydraulic oil filter, steps 7 to 8

9.10.6 Replacing the ventilation filter



Fig. 9-20 Ventilation filter

Replace the ventilation filter **(1)** according to the maintenance plan.

9.11 Emptying the water tank

9.11.1 *Cleaning accessories*

Clean the following parts as required:

- Water tank with filler strainer
- Water filter
- Sprinkler pipes with nozzles

9.11.2 *Emptying the water tank*

- 1 Unscrew the screw plug (1) of the water drain with a wrench (size 32).
- 2 Drain off the water.

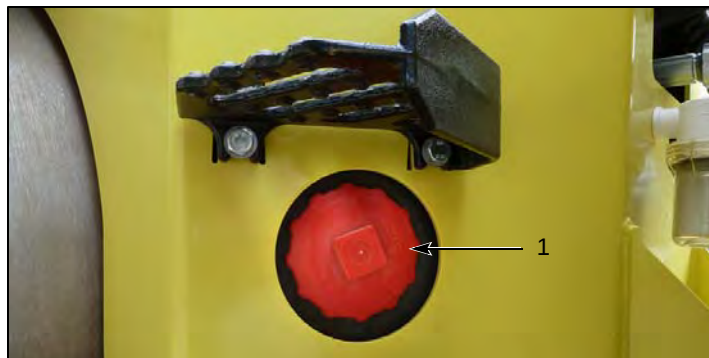


Fig. 9-21 Water drain

NOTE

In the event of the risk of frost, additionally empty the sprinkler system. See Section *Winterization (risk of freezing)*, Page 126

9.12 Coolant

A coolant antifreeze mixture for up to -25° is provided upon delivery from the factory. For temperatures colder than -25°, the fluid must be replaced by a suitable coolant antifreeze mixture.

9.12.1 *Checking coolant level*

- 1 Check coolant level every day.
 - 1.1 Check oil level while the roller is standing on a level surface and the engine is cold.
 - 1.2 You can read off the level of coolant on the expansion tank display. The water level must be between the top (FULL) and bottom (LOW) marks.
- 2* Top up coolant as required.

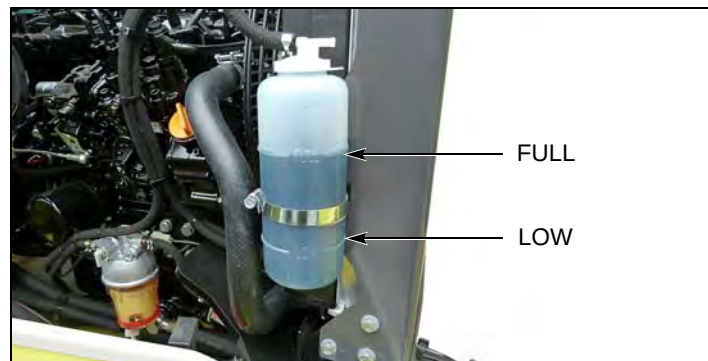


Fig. 9-22 Expansion tank

9.12.2 Topping up coolant

	⚠ CAUTION
	Danger of scalding from hot water / steam! • Only open the tank once the engine and the coolant have cooled down.

- 1 Unscrew the tank lid of the radiator.
- 2 Add coolant with antifreeze until the tank is full.



Fig. 9-23 Coolant filler neck

9.12.3 Cleaning the radiator

- 1 Check the cooling ribs of the water tank for dirt and clogging.
- 2 Clean the ribs with water or blow them out with compressed air.

NOTE Never clean the cooler with high pressure (e.g. powerful water jet).



Fig. 9-24 Radiator grill

9.13 Functional check

9.13.1 Sprinkler system

- Check and adjust
- 1 Switch on sprinkler.
 - 2 Check the nozzles on the sprinkler tubes in front and in back.

9.13.2 Roller drum scraper

- Roller drum scraper
- 1 Tension the scrapers lightly by hand.



Fig. 9-25 Roller drum scraper

- Scraper for pneumatic wheels
- 1 Adjust the scrapers with a clearance of 3-5mm.
 - 1.1 The anti-adhesive must not get scraped off.




Fig. 9-26 Clearance of scraper to pneumatic wheels

9.13.3

Tire pressure



- 1 Check the tire pressure on the pneumatic wheel axle.
- 2a = 2-2.5bar: OK.
- 2b < 2-2.5bar: Increase pressure by pumping in some air.
- 2c > 2-2.5bar: Reduce pressure by letting air out.

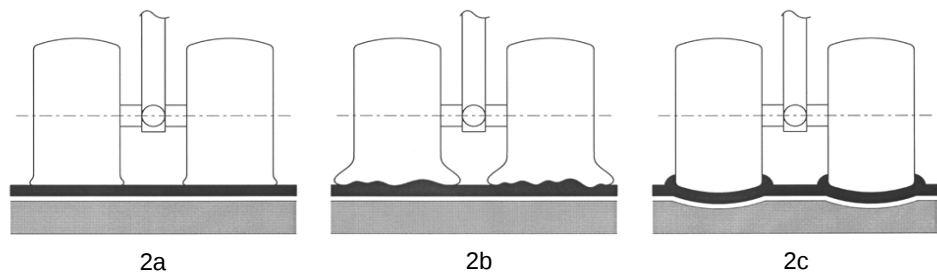

9.13.4

Air-intake filter

Dirt outlet

- 1 Press the **dirt outlet** of the air-intake filter at least once a week to clean it of dirt.

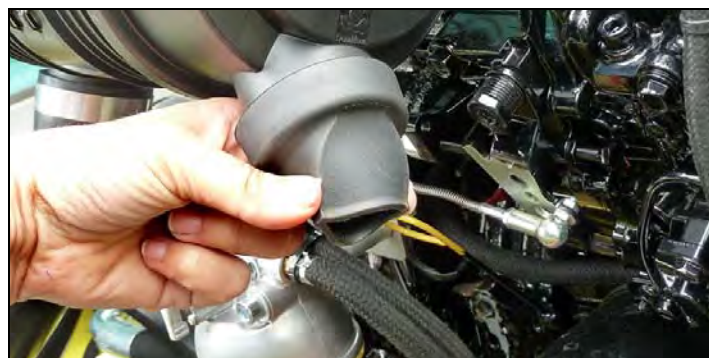


Fig. 9-27 Dirt outlet

- Soiling indicator*
- 1 If a red ring appears on the soiling display **(1)** during operation of the roller, you must:
 - 2a clean the air filter cartridge,
 - 2b or replace it.

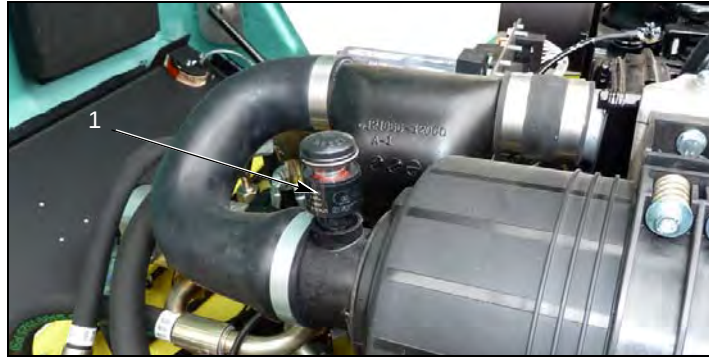


Fig. 9-28 Soiling indicator

- Air filter cartridge*
- 1 Check the air filter cartridge for:
 - 2a **Damage:** replace the cartridge.
 - 2b **Soiling:** clean the cartridge.



Fig. 9-29 Air filter cartridge

- Air intake*
- 1 Check the air intake for soiling.
 - 1.1 Clean the intake, if necessary.



Fig. 9-30 Air intake

9.13.5

Seat contact and emergency stop

- 1 Put the operating lever into the neutral position.
- 2 Sit on the driver's seat.
- 3 Start the engine.
 - 3.1 The brake light **(P)** must extinguish at once.
- 4 Leave the seat.
 - 4.1 After 0.7 sec., the brake light must light.
- 5 Switch off the engine.

Brake light **(P)**



NOTE

The emergency stop control lamp only lights when the emergency stop is pressed.

NOTE

The control lamp for the emergency stop circuit, operating lever neutral position and seat contact must extinguish after 2 seconds for delayed seat contact.

9.13.6

Brakes (brake test)

Parking brake switch



If the roller moves in spite of the actuated parking brake switch, you must perform the brake test.

- 1 Remove the brake hose from the front roller drum drive motor.
- 2 Seal the open hose end so that it can be pressurized.

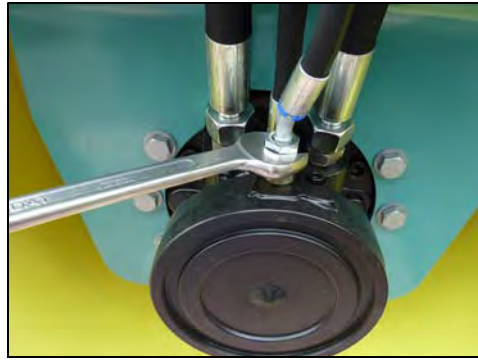


Fig. 9-31 Remove the brake hose and seal it so that it can be pressurized.

- 3 Start the roller.
- 4 Press the parking brake switch.
- 4.1 The brake light **(P)** must extinguish quickly.

Brake light **(P)**



- 5 Test the forwards and the backwards drive.

Because the front brake remains activated, the roller does not move.

- 6 Switch the roller off.
- 7 Reinstall the brake hose.
- 8 Follow the same procedure for the rear drive motor.
- 9 Be certain that you have reconnected all brake hoses!
- 10 Start the roller.
- 10.1 The brake light **(P)** must extinguish quickly.

- 11 Test the forwards and the backwards drive.

There should be no problems.

NOTE

Damage to property through incorrect handling!

If the roller does not behave exactly as described, you have a problem with one or more brakes. The roller is no longer safe for operation.

- **Have the roller repaired professionally.**

Pneumatic wheel axle

If you own a roller with a pneumatic wheel axle, it is better to remove the center wheels. Please examine both motors simultaneously.

9.13.7

Pendulum support / articulated joint

If unpleasant grinding noises are heard coming from the pendulum support or the articulated joint during operation, you must contact your dealer.

9.14

Lubricating steering cylinder, bearing



- 1 Rotate the roller's steering fully to the stop in order to grease the cylinder.
- 2 Steer the roller briefly to the right and the left. This causes the bearing to be unloaded.
- 3 Clean the grease nipple **(1)** before greasing.
- 4 Connect the grease gun to the grease nipple.
- 5 Press grease into the bearing until it visibly begins to ooze out.
- 6 Put the protective cover back on.

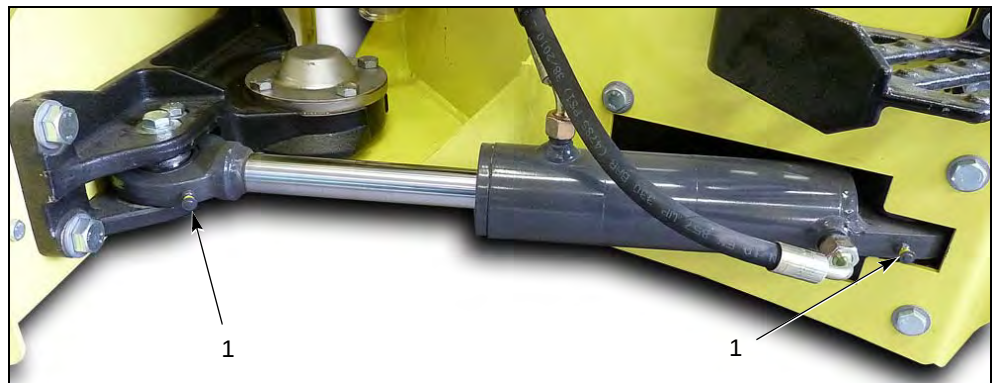


Fig. 9-32 Location of grease nipples on steering cylinder

NOTE

Damager to property due to increased wear!

- Regrease the bearing after every cleaning / steam cleaning of the roller.

9.15

Lubricant table

Tab. 9-2 Lubricant table

Brand	Hydraulic oil	Synthetic hydraulic oil based on HE esters	Grease
standard	ISO VG 46 HVLP DIN 51524 T3	ISO 15380 HEES	ISO 2137 DIN 51502
Application	Drive and vibration hydraulics	Drive and vibration hydraulics	
AGIP	Amica 46		
BLASER	Blasol 148		Foodgrease SPM00 (ARX vibro bearings)
BP	Bartran HV 46		
CASTROL	Hyspin AWH 46		
ESSO	Univis HP 46		
MOBIL	Mobil DTE15		
Motorex	Corex HV 46		Motorex 174 (ARX drive and vibro bearings)
			MOLY 218 (steering cylinder)
PANOLIN	HLP Universal 46	HLP Synth 46	
SHELL	Tellus T 46		
TOTAL	Equivis ZS 46		

1208531 | 03.07.2012

NOTE

Using the wrong oil can cause damage to the hydraulic controls! Hydraulic tubes decompose.

- It is forbidden to change used rollers for use with biodegradable hydraulic oils!
- If hydraulic hoses on a roller running on synthetic ester HE need replacing, only those declared by the supplier as being compatible with synthetic esters may be used.

9.16

Consumables

Tab. 9-3 Consumables

Designation	Brand	Quantity	Art.no.
Engine oil	Motorex Topaz 15W50	1l	921197
Grease	Motorex Moly 218	400g	1111368
Grease	Motorex 174	4.5kg	1147048
Grease	Blaser Foodgrease SPM00	14kg	1075038
Anti-freeze	Motorex green	30l	922341
Adhesive	Loctite 4052 (blue)	50ml	1-907977
Adhesive	Loctite 4100 (red)	50ml	1-907978
Colour spray	RAL dark gray	400ml	1202234
Colour spray	RAL 1016 sulphur yellow	400ml	922700
Colour spray	RAL 6033 turquoise blue	400ml	922701
Sealant	Ergo 4207	250g	1-923054

NOTE

The screws can loosen due to the vibration of the roller!

- Unless specified otherwise, all screws must be secured using blue thread-lock (for screws or nuts on rubber bearings: red thread-lock).



9.17

Tightening torques

Tab. 9-4 Torque: hex screws and hex socket head screws (Allen)

SW hex	SW Allen	Screw diameter	Steel quality	Tightening torque in Nm
10	5	M6	8.8	10
13	6	M8	8.8	25
13	-	M8	10.9	36
15	-	M10x1.25	10.9	75
17	-	M10	8.8	48
19	10	M12	8.8	84
19	-	M12	10.9	123
19	-	M14x1.5	10.9	209
24	-	M16	8.8	206
24	-	M16	10.9	302
30	-	M20	8.8	415
30	-	M20	10.9	592



Tab. 9-5 Torque: low-profile cylinder head screws and oval head screws

SW Allen	Srew diameter	Steel quality	Tightening torque in Nm
3	M5	10.9	4
5	M8	10.9	10
5	M10	10.9	18

Tab. 9-6 Torque: Shoulder screws

SW Allen	Srew diameter	Steel quality	Tightening torque in Nm
6	M10	12.9	40

Tab. 9-7 Torque: Countersunk head screws

SW Allen	Srew diameter	Steel quality	Tightening torque in Nm
6	M10	12.9	40

Tab. 9-8 Torque: Screw plugs

SW hex	SW Allen	Srew diameter	Tightening torque in Nm
-	5	1/8"thread	13
-	10	1/2"thread	80
27	-	M22x1.5	90

Tab. 9-9 Torque: Drain cock / hydraulic tank

Drain cock	
Diesel tank	Secure the screw connections with ERGO 4207 and tighten by hand, not with torque.
Hydraulic tank	Secure the screw connections with ERGO 4207 and tighten by hand, not with torque.

1208531 | 03.07.2012

9.18 Cleaning the roller

After completion of work, clean the roller:

- of major soiling;
- and the lower scrapers of deposits.

Regularly clean completely; at least once a week. When working on cohesive soils, or with cement and lime stabilizers, complete cleaning must be performed daily.

	⚠ DANGER
	Danger to life through runaway roller. Persons standing in the vicinity can be rolled over! • Before cleaning the roller, be absolutely certain to secure it against unintentional rolling away.

NOTE

While cleaning, observe the following:

- Do not use aggressive or flammable cleansing agents (e.g. gasoline or inflammable substances).
- Only work with the engine turned off.
- Do not directly subject electrical components or isolating materials to a steam jet when using a steam cleaner. Always cover these materials.
- When washing the roller, ensure that no water is sprayed into the air-intake filter.
- Before cleaning the roller with pressure cleaners using water, steam, etc., cover all openings into which the cleaning agent may penetrate. Remove these dummy flanges after cleaning the roller.

10

Repair

10.1 Battery

NOTE

Risk of cable fire or short circuit.

Keep to the proper sequence when removing or installing the terminal connections.



The battery charge level can be read in the multifunction display unit.

- Ignition on = battery voltage. The battery voltage should not fall below 10 volts while starting, otherwise the battery must be charged.
- Machine running = alternator charging voltage. The voltage should lie in a range of from 13 to 14.5 volts.

10.1.1

Replacing the battery



- 1 Loosen the (-) terminal and disconnect it (size 13).
- 2 Loosen the (+) terminal and disconnect it (size 10).
- 3 Loosen and remove the mounting bracket.



Fig. 10-1 Loosening the terminals

- 4 Lift the battery out of the engine compartment.
- 5 Set the new battery in place.
- 6 Connect the battery.
 - 6.1 Begin with the (+) terminal.



Fig. 10-2 Replacing the battery

NOTE

The battery poles and terminals must be clean. If they are coated with a (whitish or greenish) sulfur crust they must be cleaned.

10.1.2

Starting with another battery (jumping)



- 1 Connect the red cable to the (+) terminals of both batteries.
- 2 Connect one end of the green or black cable to the (-) terminals of both batteries.
- 3 Actuate the starter. Allow the engine to run.
- 4 Wait until the engine is idling smoothly and then disconnect the cables.

4.1 Begin with the (-) terminal.

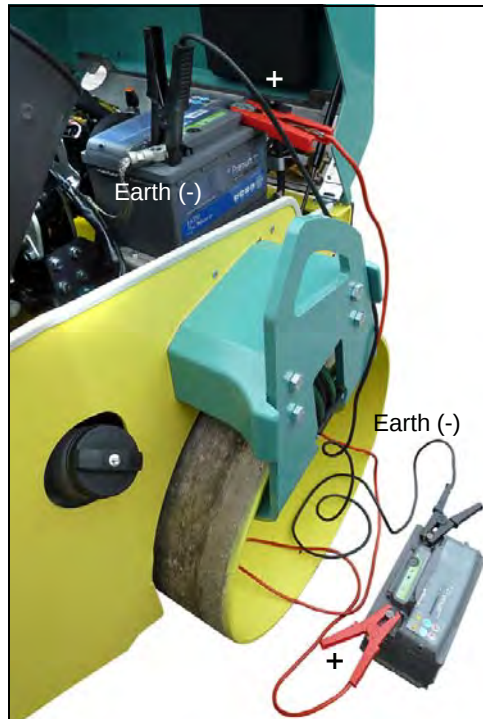


Fig. 10-3 Jumping the battery

NOTE

The battery poles and terminals must be clean. If they are coated with a (whitish or greenish) sulfur crust they must be removed and cleaned.

10.1.3

Charging the battery using a battery charger



- 1 Disconnect the battery.
- 2 Connect the battery charger.
 - 2.1 Observe the battery charger manufacturer's manual.
- 3 Start with the (+) terminal when reconnecting the battery.

NOTE

The battery poles and terminals must be clean. If they are coated with a (whitish or greenish) sulfur crust they must be removed and cleaned.

10.1.4

Long-term storage

If the roller is not in operation for more than two days, the battery must be turned off at the battery cut-off switch. This reduces the risk of battery discharge.

If no battery cut-off switch is fitted to your roller, remove the negative battery cable from the battery if a standstill period of more than two weeks is expected.

10.2

Fuses

	⚠ DANGER
	There is danger to life if the roller does not stop in hazardous situations! Fuses and safety switches must never be shorted.


	⚠ CAUTION
	Risk of injury through short circuit and cable fire when handling electrical parts! Always disconnect the power supply when working on the electrical system.

NOTE

Before replacing the fuse, you must identify and remove the cause of the fault.

10.2.1

Engine compartment fuses

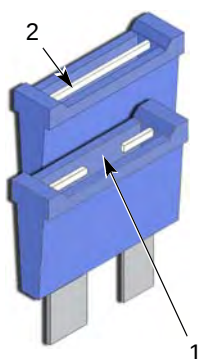

The fuses are located on the right of the engine, at the front between the engine and the water tank.

The fuse numbers are indicated on the fuse box.

Always replace a defective fuse **(1)** with a functioning fuse **(2)** of the same amperage (according to the label or color of the fuse).

Tab. 10-1 Engine compartment fuses

Fuse No.	Power	Fuse-protected circuit
F21	40 A	Pull-in solenoid
F22	15 A	Diesel pump, alternator
F23	15 A	Reserve
F24	10 A	Reserve

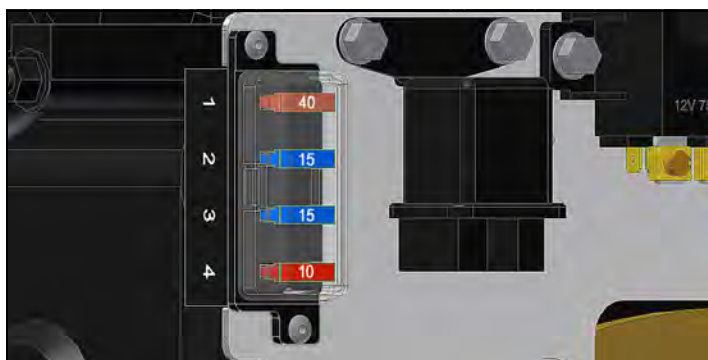


Fig. 10-4 Fuses in ARX 4 engine compartment

10.2.2

Steering column fuses

- 1 Remove the four fastening screws on the fuse box and
- 2 Remove the cover.
- 3 Replace the defective fuse.

Tab. 10-2 Steering column fuses

Fuse No.	Power	Fuse-protected circuit
F1	10 A	Hazard warning light
F2	7.5 A	Parking light, front right, rear left
F3	7.5 A	Parking light, front left, rear right
F4	10 A	Dipped light
F5	15 A	Revolving warning light, work light
F6	5 A	Horn
F7	10 A	Display unit, blinker, reverse alarm

Fuse No.	Power	Fuse-protected circuit
F8	10 A	Seat heating
F9	3 A	Controller
F10	10 A	Controller, drive pump, brake valve, holding solenoid
F11	15 A	Sprinkling
F12	10 A	Flow divider, edge cutter
F13	10 A	Vibro switch valve
F14	1 A	Brake pressure switch
F15	25 A	Fuse, hydraulic oil cooler
F16	15 A	Reserve



Fig. 10-5 Position of fuses in the steering column

1208531 | 03.07.2012

NOTE

Faulty installation can cause short circuiting or a cable fire.

- When replacing fuses, do not mix them up.

10.3 Replacing bulbs

10.3.1 Replacing bulbs at the front

- 1 Open the hood, see .Opening the hood, Page 91.

The bulbs of the low beam lights **(1)** and the parking lights **(2)** are now accessible.



Fig. 10-6 Dipped lights and parking lights:

- | | |
|---------------------|---|
| <i>Dipped light</i> | <ol style="list-style-type: none"> 1 Remove the plug from the rear of the lamp unit. 2 Remove the guard. 3 Press on the end of the securing clip to remove it. 4 Replace the defective bulb with a new one of the same type and power. 5 Put the guard back on the casing. |
|---------------------|---|

NOTE

The guard must sit firmly on the glass body of the low beam headlight unit in order to prevent water from entering.

- | | |
|-----------------------|--|
| <i>Parking light</i> | <ol style="list-style-type: none"> 1 Pull the bulb out of the lamp holder. 2 Replace the defective bulb with a new one of the same type and power. |
| <i>Position light</i> | <ol style="list-style-type: none"> 1 Remove the lamp housing of the position light (1). <ol style="list-style-type: none"> 1.1 To do so, undo the screw in the center of the housing. 2 Replace the defective bulb with a new one of the same type and power. |

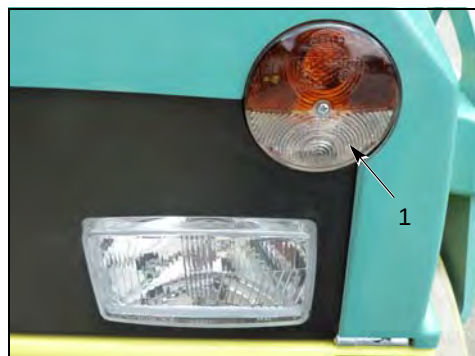


Fig. 10-7 Position light

NOTE

Do not touch the glass of the new bulb with your fingers. Sweat on your hands can burn into the glass and reduce bulb lifetime.

10.3.2 Replacing bulbs at the rear

At the rear, you have direct access to the work light **(1)** and the tail lights **(2)**.

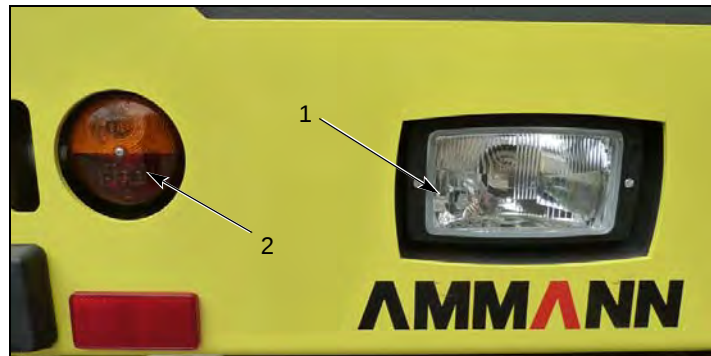


Fig. 10-8 Work light / tail light

Work light

- 1 Remove the entire work light from the water tank.
- 2 Remove the plug from the rear of the lamp unit.
- 3 Remove the guard.
- 4 Press on the end of the securing clip to remove it.
- 5 Replace the defective bulb with a new one of the same type and power.
- 6 Put the guard back on the casing.

NOTE

The guard must sit firmly on the glass body of the low beam headlight unit in order to prevent water from entering.

Tail light

- 1 Remove the lamp housing.
 - 1.1 To do so, undo the screw in the center of the housing.
- 2 Replace the defective bulb with a new one of the same type and power.

10.4 Gas strut



Gas struts are maintenance-free! They require no maintenance such as lubrication. They are designed for the respective requirements and work trouble-free for many years.

10.4.1

Replacing gas struts

	⚠ WARNING
	Risk of accident through hood falling down! • Secure the hood before you replace the gas struts. ◦ Support the hood with a rod. ◦ Attach the hood to a crane by the handle.

removal



- 1 Use a screwdriver to lift the clips.
- 2 Pull the gas strut away from the ball joint.

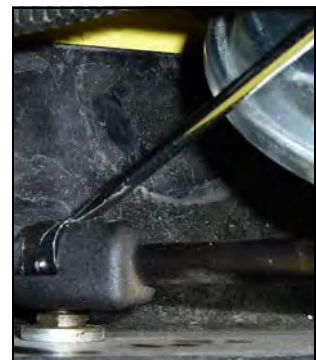
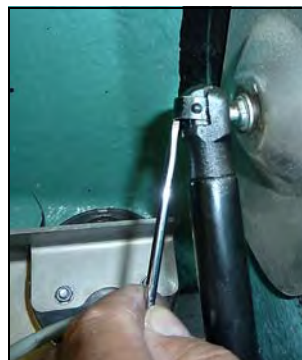
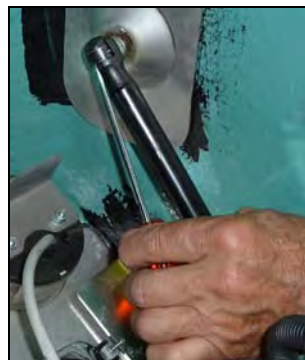


Fig. 10-9 Using a screwdriver, lift the clips and loosen the springs

installing

- 1 The new gas struts can easily be installed by pressing them onto the ball joint.
 - 1.1 The rod must face downward.

NOTE

Gas struts should not be installed if they have been damaged through mechanical manipulation.

- Welding on gas struts as well as dirt or paint on the piston rods can lead to failure of the units.
- Avoid modifications, manipulation, impacts, tensile loading, heating, painting over or removal of imprints.
- Do not install defective or improperly handled products.

NOTE

If gas struts are no longer needed, they must be disposed of in an environmentally appropriate manner. For this purpose, they will be drilled out to allow the compressed nitrogen to escape and to drain the oil they contain. See also *Removal and depressurization of the gas struts*, Page 136



Storage

11.1 Storage

11.1.1 Short-term storage

- Put the operating lever into neutral position.
- Secure the roller from unauthorized start-up and unintentional rolling away.
- Remove the ignition key.

11.1.2 Long-term storage

Tab. 11-1 Long-term storage

defective components	precautions	Chapter
Diesel engine	Observe the information in the "Long-term storage" section in the diesel engine manual.	
Fuel (diesel)	Drain.	9.8.3
Battery cut-off switch	If the roller is not in operation for more than two days, the battery must be turned off at the battery cut-off switch. This reduces the risk of battery discharge. If no battery cut-off switch is fitted to your roller, remove the negative battery cable from the battery if a standstill period of more than two weeks is expected.	8.7
Battery	Uninstall the battery and clean the outside. Charge the battery once a month during standstill time.	10.1
Air filter unit, exhaust pipe	Cover the air filter unit or its intake opening and the exhaust pipe with adhesive tape. This prevents moisture from getting into the engine.	
Hydraulic oil level	Drain the hydraulic oil completely. Fill up the hydraulic oil tank with fresh oil when putting the machine back into operation.	9.10
Steering cylinder	Lubricate the bearings of the steering knuckle and the front bearing of the steering cylinder with grease. Lubricate the piston rod of the steering cylinder with grease guard.	9.14
Tires	Only combined rollers have tires. Relieve the pressure in tires (pneumatic wheels) if the machine is not being used for a prolonged period by relieving the pneumatic wheel axis with a wooden wedge so as to avoid flat spotting damage to the tires.	

11.2 Winterization (risk of freezing)



The purpose of winterization is to ensure that cold air temperatures of below 0 °C do not damage the sprinkler system.

11.2.1 **Draining the water tank and sprinkler**

The water tank and the sprinkler unit must be drained.

- 1 Undo the quick-release coupling of the sprinkler hose.
 - 1.1 Press the black plastic ring against the screw connection.
- 2 Pull the hose off the coupling.
- 3 Drain off the water.
- 4 Switch on sprinkler.
- 5 Let the water pump run briefly.
 - 5.1 This pumps the remaining water out of the pipes.



Fig. 11-1 Draining sprinkling water

11.2.2 **Removing the water filter**

The plastic container must be removed if there is a risk of freezing. The water would crack the container if it were to freeze.

- 1 Unscrew the plastic container **(1)** of the water filter.



Fig. 11-2 Water filter

NOTE

Press the battery cut-off switch if storing for more than two days.

If no battery cut-off switch is fitted to your roller, remove the negative battery cable from the battery if a standstill period of more than two weeks is expected.

12

Transport

12.1 Transport

	⚠ DANGER
	Risk of crushing through presence in the pivoting area (danger zone)! The articulated joint lock (joint protection) must be fitted before lifting the roller for transport.

12.1.1 Joint protection

Blocking the joint protection

- 1 Release the lower part of the joint protection (1).
 - 1.1 First, remove the compression spring (2) and then the lock bolt (3).
- 2 Carefully turn the roller steering wheel until the joint protection comes in line with the opposite loop.

NOTE

You must start the roller to be able to move the steering wheel.

	⚠ DANGER
	Risk of crushing through presence in the pivoting area (danger zone)! As soon as the roller is aligned, shut it off again.

- 3 Hook the joint protection into place.
- 4 Secure the joint protection with the lock bolt (3).
- 5 Secure the lock bolt with the compression spring (2).

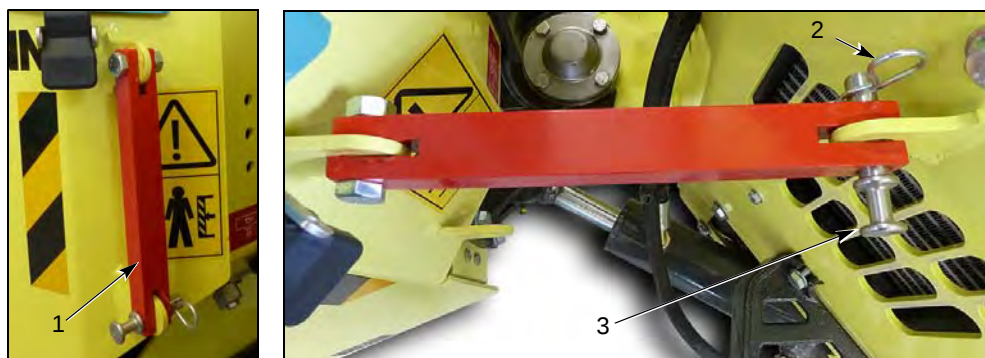


Fig. 12-1 Joint protection open / joint protection locked in place

12.1.2

Lifting at the 4-point lifting eyes



With the 4-point lifting eyes, lift the roller with suitable tools using the four lifting eyes integrated in the wheel suspension.

- 1 Bring the joint protection into place.
- 2 Lift the roller vertically with suitable hoisting tackle.

2.1 Always use all four lifting eyes integrated in the wheel suspension.

The 4-point lifting eyes are designed for a WLL of 5 tons (Working Load Limit).



Fig. 12-2 4-point lifting eye

NOTE

The lifting devices (steel ropes, etc.) must be at least 1,800mm long.



⚠ DANGER

Danger to life through suspended loads!

- Persons should not linger beneath suspended loads!

NOTE

The roller will weight less if the water tanks are drained before transporting.

12.1.3

Securing the roller on the transporter



- 1 Bring the joint protection into place.
- 2 Attach the lashing straps to the lashing rings on the roller and on the truck
 - 2.1** Lashing method: Direct lashing/diagonal lashing as shown in photo
 - 2.2** Use a lashing strap with a permissible tensile force of LC = 2,500 daN

The lashing rings on the roller are designed for a permissible tensile force of 2,500 daN.

Permissible angle ranges for diagonal lashing:

- $0^\circ \leq \alpha \leq 40^\circ$
- $40^\circ \leq \beta \leq 50^\circ$



Fig. 12-3 Lashing the roller / side view

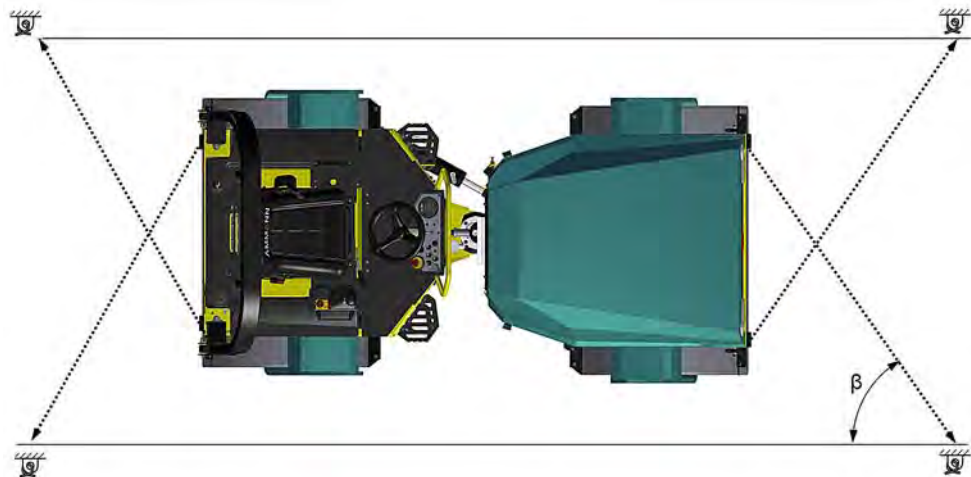


Fig. 12-4 Lashing the roller / front view

	⚠ CAUTION
	Risk of accident through blocked steering! • Open the joint protection before starting the roller.

12.1.4

Center of gravity

The center of gravity relevant to transport is located 650mm from the floor and approx. in the center of the roller, depending on the fill level of the diesel or water tanks.



Fig. 12-5 Roller's center of gravity

13

Disposal

13.1 Introduction

	⚠ CAUTION Environmental hazard through operating materials! • Do not allow any liquids get into drains, soil or the environment.
---	--

The roller must be disposed of properly; ask your authorized dealer.

13.2 Removal and depressurization of the gas struts

	⚠ WARNING Eye injury! Because of the high internal pressure, chips and oil can spatter from the site of sawing or drilling. • Wear eye and face protection. • Cover the site of the saw cut.
---	---

	⚠ CAUTION Environmental hazard through operating materials! Gas struts are filled with oil. • Do not allow any liquids get into drains, soil or the environment.
---	--

In case of disposal, pressurized gas struts must be depressurized according to the following regulations:

- 1** Fasten the pressurized tube between two prismatic jaws without deforming it and in such a way that the dimension X is at least 25mm (see below).
- 2** To depressurize:
 - 2a** Slowly cut the pressurized tube open at the points indicated using a **handsaw** or,
 - 2b** Drill a hole in the tube using a **drill** with about a 3 mm diameter.

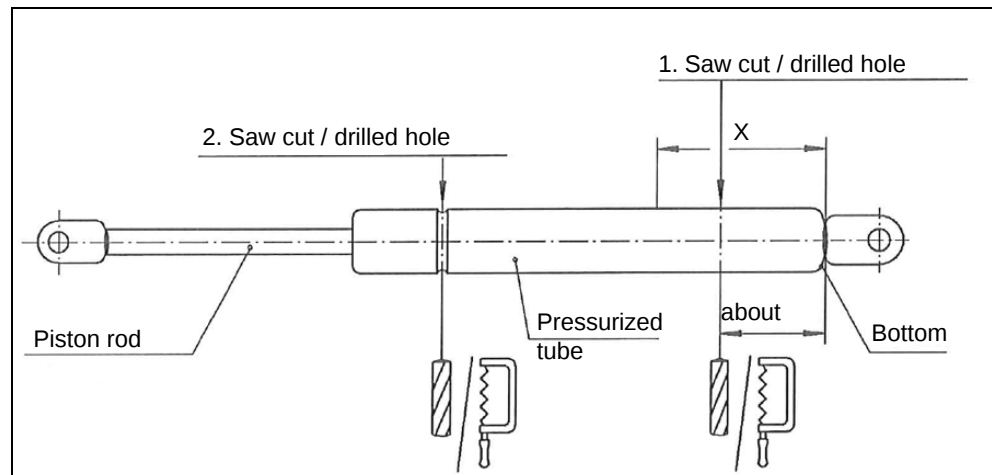


Fig. 13-1 Removal and depressurization of the gas struts

1. saw cut / hole position: Cut or drill into the pressurized tube about 20mm from the bottom.
2. saw cut / hole position: Cut or drill into the pressurized tube in the bead.

NOTE

If disposal according to these regulations is not possible, ask your authorized dealer.

14

Appendix

14.1

Wiring diagram, ARX 4

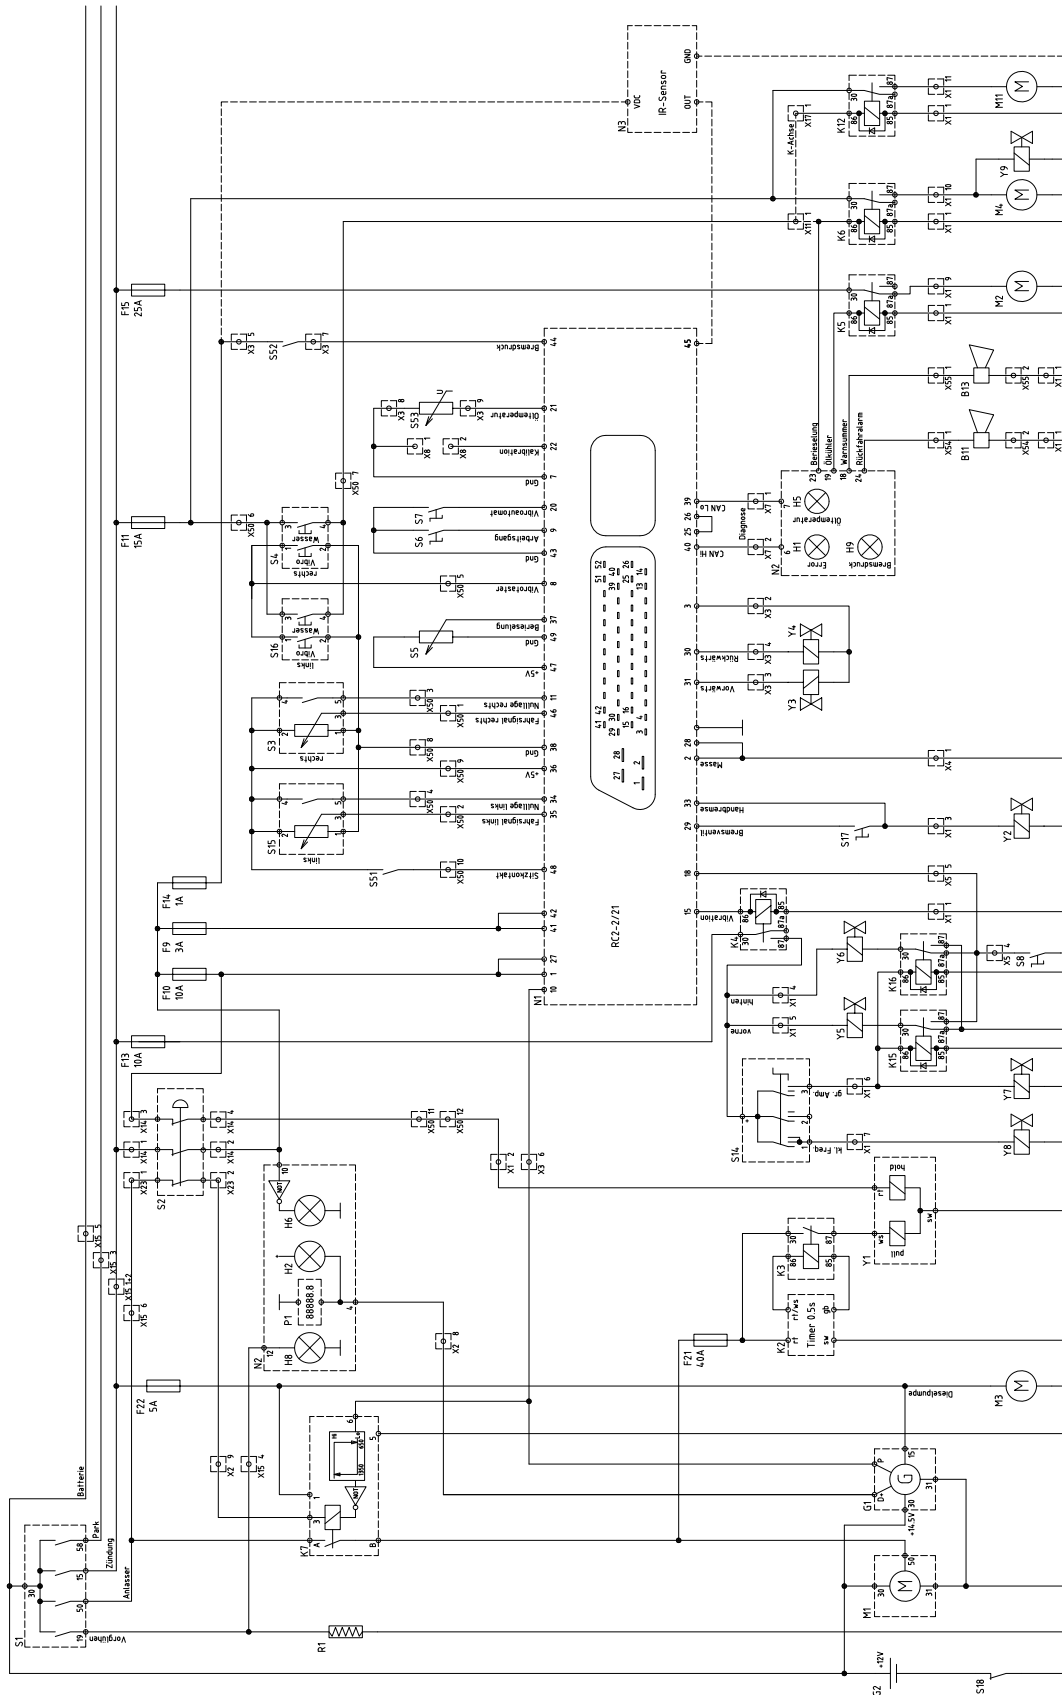


Fig. 14-1 Wiring diagram no. 1202835-1

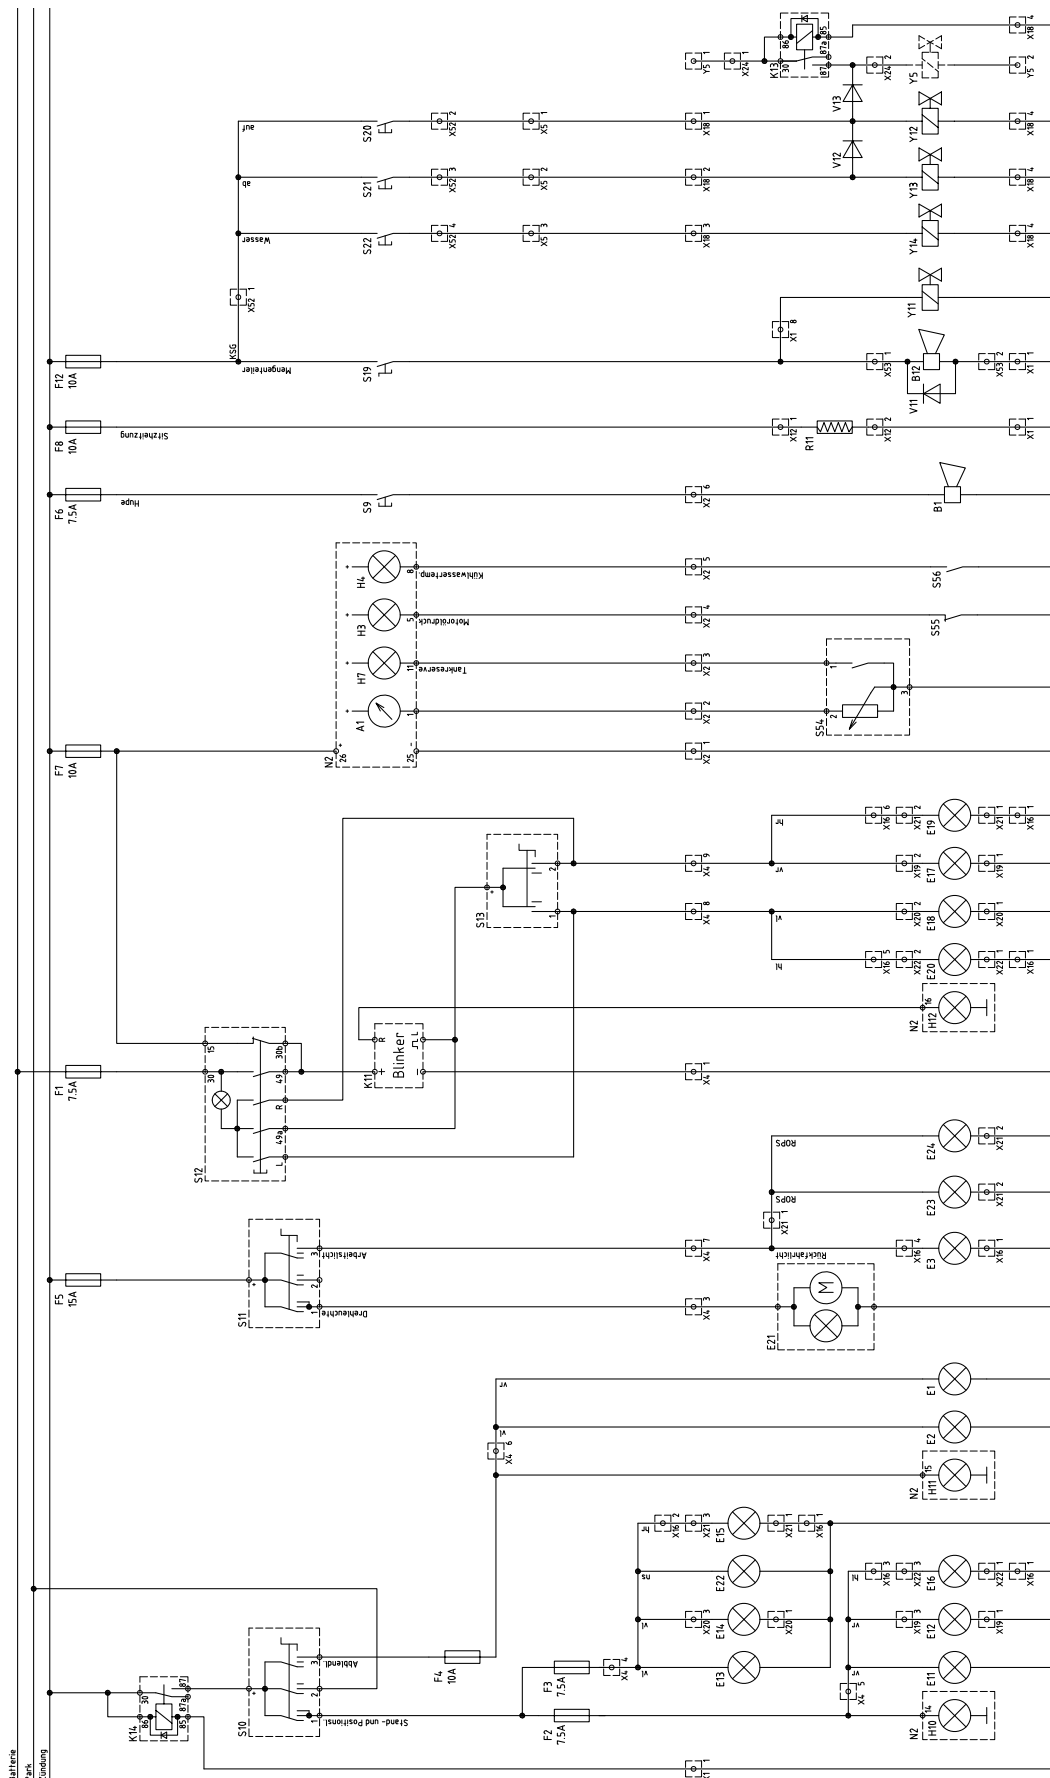


Fig. 14-2 Wiring diagram no. 1202835-2

14.1.1

Key for ARX 4 wiring diagram

Element	Description
A1	Diesel tank fuel level display
A2	Voltage display
B1	Horn
B11	Reversing alarm
B12	Warning buzzer, flow divider
B13	Warning buzzer, seat contact delay
E1	Front right low beam light
E2	Front left low beam light
E11	Front right parking light
E12	Front right position light
E13	Front left parking light
E14	Front left position light
E15	Rear right parking light
E16	Rear left parking light
E17	Front right indicator
E18	Front left indicator
E19	Rear right indicator
E20	Rear left indicator
E21	Revolving warning light
E22	License plate illumination
E23	Work light rear
F1	Fuse, hazard flasher
F2	Fuse, parking light 1
F3	Fuse, parking light 2
F4	Low beam light fuse
F5	Fuse, revolving warning light, work light
F6	Fuse, horn
F7	Fuse, display unit, reverse alarm, blinker
F8	Fuse, Seat heating
F9	Fuse, controller, supply
F10	Fuse, controller, outputs
F11	Fuse, sprinkler
F12	Fuse, flow divider, edge cutter
F13	Fuse - vibration

Element	Description
F14	Fuse, controller, inputs
F15	Fuse, hydraulic oil cooler
F16	Fuse, reserve
F21	Fuse, starter
F22	Fuse, diesel pump
F23	Fuse, reserve
F24	Fuse, reserve
G1	Alternator
G2	Battery
H1	Warning lamp, error
H2	Control lamp, charging control
H3	Warning lamp - engine oil pressure
H4	Warning lamp - coolant temperature
H5	Warning lamp, hydraulic oil temperature
H6	Warning lamp, emergency stop
H7	Warning lamp, diesel reserve
H8	Control lamp, pre-heating
H9	Control lamp, brake pressure
H10	Control lamp, parking lights
H11	Control lamp, dipped lights
H12	Control lamp, blinker
K1	Relay, starting interlock
K2	Timer relay
K3	Relay, pull-in solenoid
K4	Relay, vibration
K5	Relay, hydraulic oil cooler
K6	Relay, sprinkler
K7 **	Relay, starting interlock
K8	Relay, sprinkler
K11	Relay, blinker
K12	Relay, anti-adhesive sprinkler
K13	Relay, edge cutter
K14	Relay, light
K15 **	Relay, front vibration
K16 **	Relay, rear vibration

Element	Description
M1	Starter motor
M2	Hydraulic oil cooler
M3	Diesel pump
M4	Sprinkler pump
M11	Sprinkler pump, anti-adhesive
N1	Controller
N2	Display unit
N3	Measuring transducer, asphalt temperature
P1	Operating hours counter
R1	Pre-heating coil
R11	Seat heating
S1	Switch, ignition
S2	Switch, emergency stop
S3	Operating lever sensor, right
S4	Operating lever switch, right
S5	Potentiometer, sprinkler
S6	Switch, work gear
S7	Switch, vibration automation
S8	Switch, rear vibration
S9	Switch, horn
S10	Switch, parking light / low beam light
S11	Switch, revolving warning light, work light
S12	Switch, hazard flasher
S13	Switch, indicator
S14	Switch, vibration selector **
S15	Operating lever sensor, left *
S16	Operating lever switch, left *
S17	Switch, parking brake
S18	Battery cut-off switch *
S19	Switch, flow divider *
S20	Switch, edge cutter up *
S21	Switch, edge cutter down *
S22	Switch, edge cutter, water *
S51	Sensor, seat contact
S52	Sensor, brake pressure

Element	Description
S53	Sensor, hydraulic oil temperature
S54	Sensor, diesel tank
S55	Sensor, engine oil pressure
S56	Sensor, coolant temperature
V11	Free-running diode, buzzer, flow divider
V12	Diode, edge cutter 1
V13	Diode, edge cutter 2
Y1	Pull-in / holding solenoid
Y2	Valve, locking brake
Y3	Drive pump, forwards
Y4	Drive pump, backwards
Y5	Valve, front vibration
Y6	Valve, rear vibration
Y7 **	Valve, large amplitude vibration
Y8 **	Valve, small frequency vibration
Y9	Shut-off valve, sprinkler pump
Y11 *	Valve, flow divider
Y12 *	Valve, edge cutter
Y13 *	Valve, edge cutter
Y14 *	Valve, edge cutter water

(*) Optional

(**) Not available

14.2 Hydraulics diagram, ARX 4

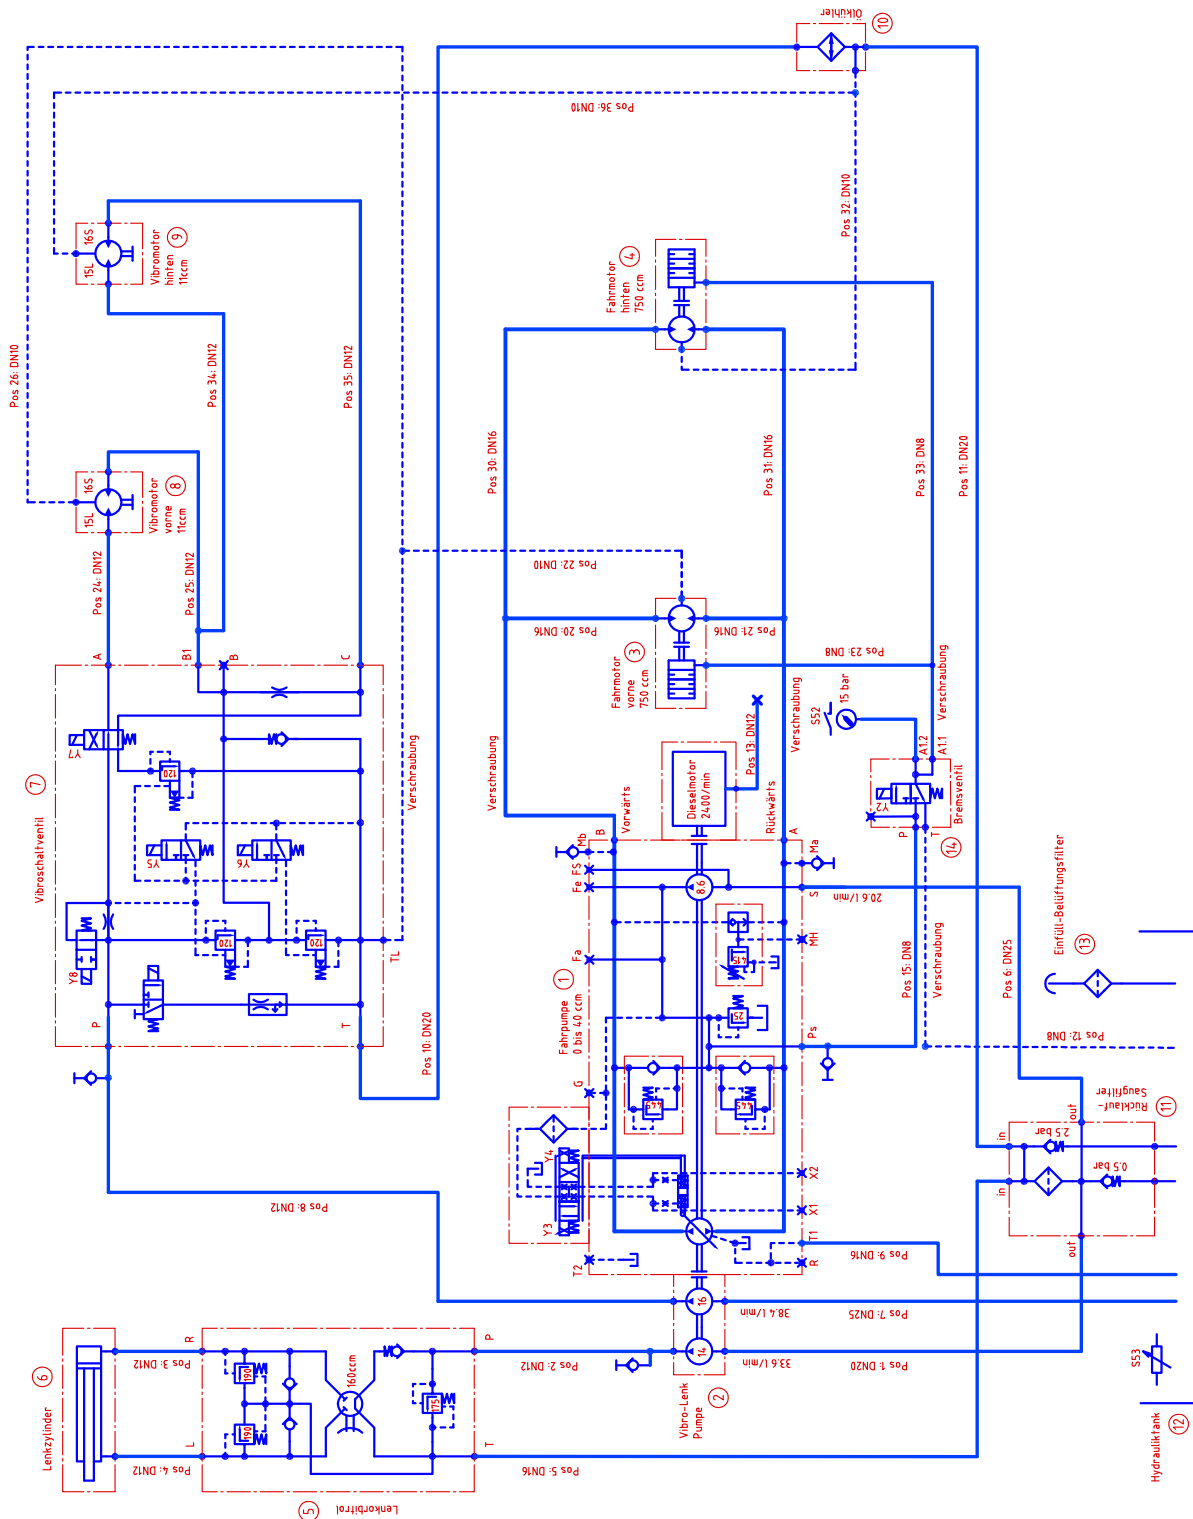


Fig. 14-3 Hydraulics diagram no. 1208392

14.2.1

Key for ARX 4 hydraulics diagram

Element	Description
1	Drive pump
2	Vibro-steering pump
3	Front drive motor
4	Rear drive motor
5	Steering orbitrol
6	Steering cylinder
7	Vibro switch valve
8	Vibro motor, front
9	Vibro motor, rear
10	Oil cooler
11	Return-line suction filter
12	Hydraulic oil tank
13	Filler, ventilation filter
14	Brake valve

14.3 Hydraulics diagram, ARX 4 K


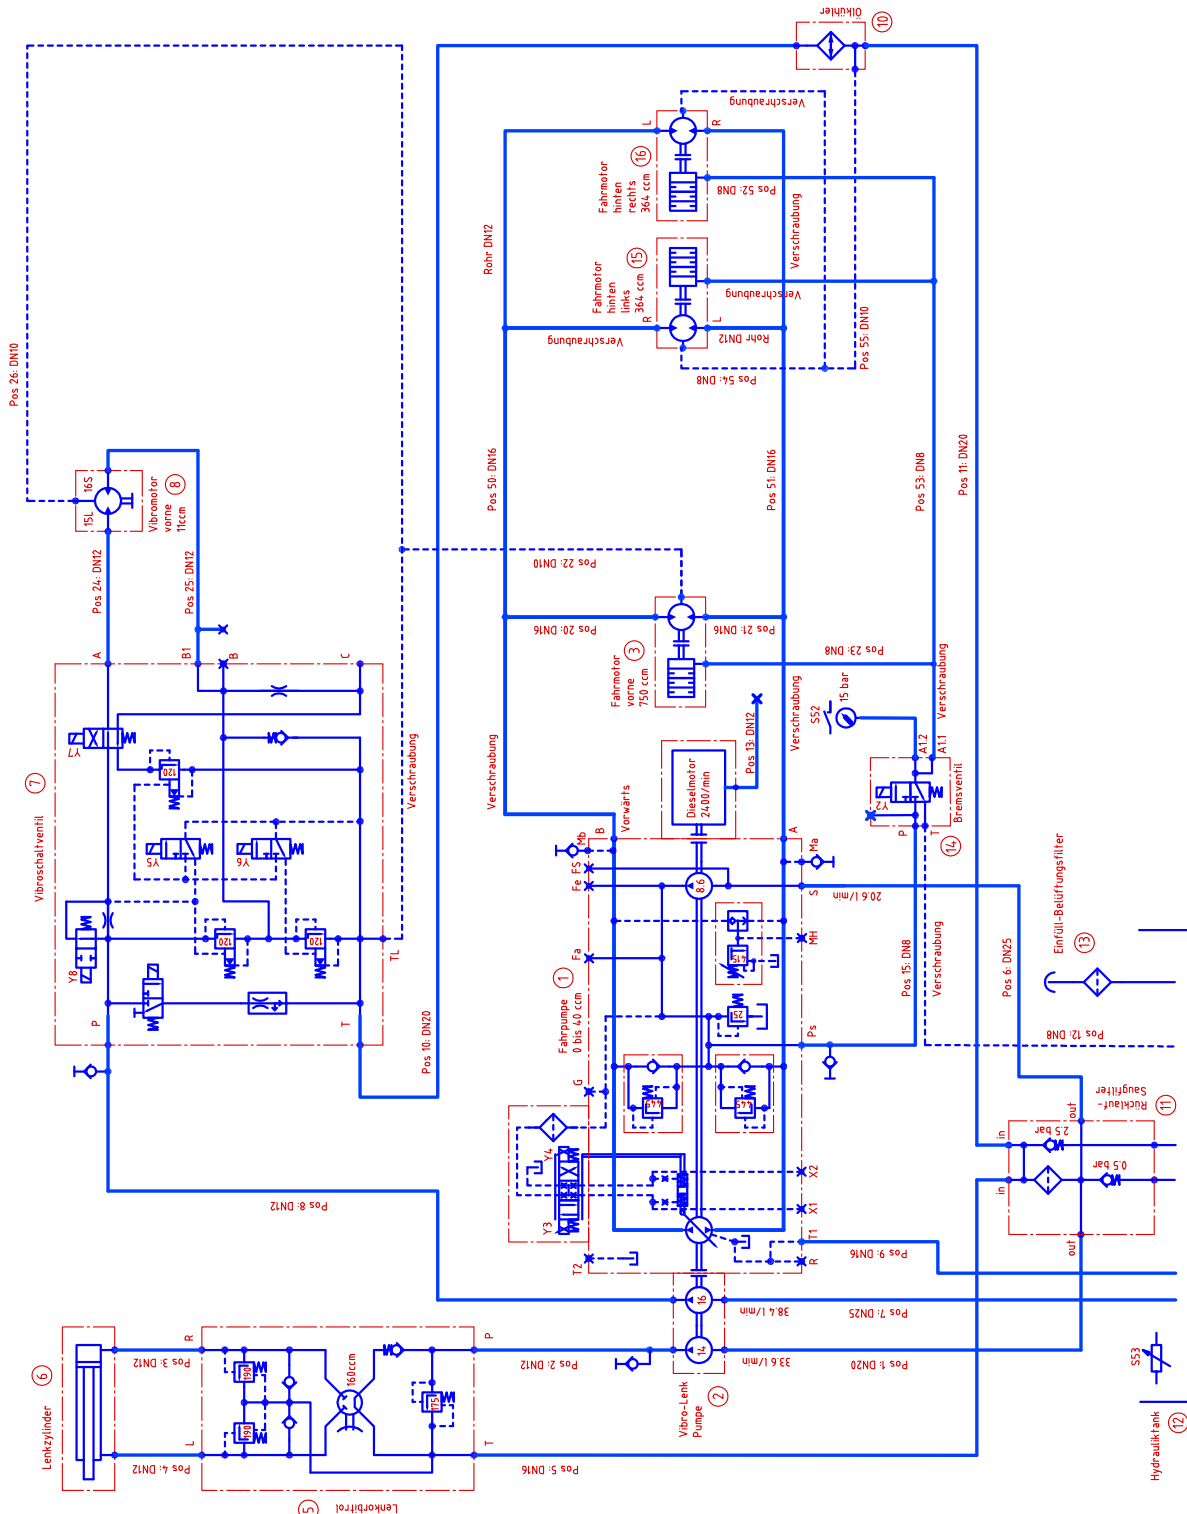


Fig. 14-4 Hydraulics diagram no. 1217529

14.3.1

Key for ARX 4 K hydraulics diagram

Element	Description
1	Drive pump
2	Vibro-steering pump
3	Front drive motor
4	Rear drive motor
5	Steering orbitrol
6	Steering cylinder
7	Vibro switch valve
8	Vibro motor, front
9	Vibro motor, rear
10	Oil cooler
11	Return-line suction filter
12	Hydraulic oil tank
13	Filler, ventilation filter
14	Brake valve
15	Drive motor, rear left
16	Drive motor, rear right



Tables

Documents for the ARX 4	14
Roller with roller drum	20
Roller with pneumatic wheel (combined roller)	20
ARX 4 dimensions	21
ARX 4 Performance Characteristics	22
Fill levels ARX 4	22
Limits for application in consideration of environmental conditions	24
ARX 4 sound power level	31
Warning stickers on board	32
Notice stickers on board	34
Error code upon start-up	47
Error code during operation	47
BUS error message	49
Torque: Threaded bolt for ROPS joint	56
Anti-adhesive designations	79
Excerpt from the Yanmar engine manual about diesel specifications	93

Lubricant table.	110
Consumables	111
Torque: hex screws and hex socket head screws (Allen).	111
Torque: low-profile cylinder head screws and oval head screws	112
Torque: Shoulder screws	112
Torque: Countersunk head screws	112
Torque: Screw plugs	112
Torque: Drain cock / hydraulic tank.	112
Engine compartment fuses	119
Steering column fuses.	119
Long-term storage.	126